

ReMOTE SL Sonar template setup.

Once the two Sonar templates (*Sonar1.syx* and *Sonar2.syx*) have been loaded into the ReMOTE SL on adjacent template spaces you need to setup a 'Cakewalk Generic Surface'.

This is done in the control surfaces menu from the options dropdown menu in Sonar. In the control surfaces window, click on the 'Add' icon on the right-hand side and select 'Cakewalk Generic Surface' then set its input to the ReMOTE SL.

The control surface then needs to be set up, to do this select 'Cakewalk Generic Surface' from the Tools dropdown menu. You then need to type RemoteSL in the 'presets:' box and click save (the disk icon to the right of the box).

If you then quit Sonar you need to find the presets folder for Sonar. This should be located in C:\Program files\ Cakewalk\ Sonar 5\ Presets\ {404C.....A784} (this will depend on the version of sonar you have installed and where you have chosen to install it)

If you then replace the RemoteSL file in this folder with the one from the download (they should have the same file name) then this should have set up the template back in Sonar.

Start Sonar again, and open up the "Cakewalk Generic Surface" window again (from the tools menu) and select the new RemoteSL preset (the old one should now have a * next to it, to indicate that it has been edited. Save the new preset, by clicking the disk icon and you all done.

The following controls on the SL are assigned;

Faders = Volume

Pots = Pan

Encoders = Send 1

(same for each channel)

The buttons below the faders are assigned to Solo & Mute for the corresponding track.