

FPC (notes, ch. 2)

Control panel for FPC (notes, ch. 2) featuring 8 rotary knobs and two rows of buttons.

1	2	3	4	5	6	7	8	Play	▲
40	38	46	44	49	55	51	53		
37	36	42	82	48	47	45	43	Stop	▼

Switches (CC, ch. 1)

Control panel for Switches (CC, ch. 1) featuring 8 rotary knobs and two rows of buttons.

1	2	3	4	5	6	7	8	Play	▲
11 (on)	12 (on)	13 (on)	14 (on)	15 (on)	16 (on)	17 (on)	18 (on)		
11 (off)	12 (off)	13 (off)	14 (off)	15 (off)	16 (off)	17 (off)	18 (off)	Stop	▼

Increase/Decrease (CC, ch. 1)

Control panel for Increase/Decrease (CC, ch. 1) featuring 8 rotary knobs and two rows of buttons.

1	2	3	4	5	6	7	8	Play	▲
2 (up)	3 (up)	4 (up)	5 (up)	6 (up)	7 (up)	8 (up)	9 (up)		
2 (down)	3 (down)	4 (down)	5 (down)	6 (down)	7 (down)	8 (down)	9 (down)	Stop	▼

Gross Beat (CC, ch. 1)

Control panel for Gross Beat (CC, ch. 1) featuring 8 rotary knobs and two rows of buttons.

1	2	3	4	5	6	7	8	Play	▲
29 (slot 1)	29 (slot 2)	29 (slot 3)	29 (slot 4)	29 (slot 5)	29 (slot 6)	29 (slot 7)	29 (slot 8)		
29 (slot 9)	29 (slot 10)	29 (slot 11)	29 (slot 12)	29 (slot 13)	29 (slot 14)	29 (slot 15)	29 (slot 16)	Stop	▼

Slicex (notes, ch. 2)

Control panel for Slicex (notes, ch. 2) featuring 8 rotary knobs and two rows of buttons.

1	2	3	4	5	6	7	8	Play	▲
68	69	70	71	72	73	74	75		
60	61	62	63	64	65	66	67	Stop	▼

Aeolian (notes, ch. 2)

Control panel for Aeolian (notes, ch. 2) featuring 8 rotary knobs and two rows of buttons.

1	2	3	4	5	6	7	8	Play	▲
72	74	75	77	79	80	82	84		
60	62	63	65	67	68	70	72	Stop	▼

Transport

Control panel for Transport featuring 8 rotary knobs and two rows of buttons.

1	2	3	4	5	6	7	8	Play	▲
Tempo + 0.1 bpm	Tempo + 1 bpm	Tempo + 5 bpm	Tempo + nudge	Tap tempo	Undo up	Selected channel up	Record		
Tempo - 0.1 bpm	Tempo - 1 bpm	Tempo - 5 bpm	Tempo - nudge	Show playlist	Undo down	Selected channel down	Metro-nome	Stop	▼