# **Control** User Guide (Scarlett 3rd Gen. Edition)





# TABLE OF CONTENTS

INTRODUCTION
System Requirements
Software Installation
The Scarlett Mixer – basic principles5
OUTPUT ROUTING PAGE
Configuring and controlling the mixer
The Output section
The Mixer section
Hardware Inputs available on Scarlett devices
Using Output Presets
Direct Routing
2 Channel Analogue
8 Channel Analogue
Digital
Empty
Examples of Use
Recording and Tracking
Stand-alone mixer (816, 1818 and 18120 interfaces only)
Using the Loopback feature
Snapshots
INPUT SETTINGS
Inst/Line
Pad
Air
DEVICE SETTINGS
Monitor Controls
Speaker Switching
Sample Rate
Clock Source
Digital Inputs
TROUBLESHOOTING
COPYRIGHT AND LEGAL NOTICES

# INTRODUCTION

This is the User Guide for Focusrite Control, the software application developed for use with the Focusrite Scarlett 3rd Generation range of USB audio interfaces.

If you've just become the owner of a Scarlett 3rd Generation interface, you'll need both this User Guide and the User Guide for your hardware. You can download the hardware User Guide from <u>focusrite.com/downloads</u>.

The combination of the Scarlett's excellent audio performance and professional build quality with Focusrite Control's simple and intuitive interface will, in conjunction with the Digital Audio Workstation (DAW) of your preference, provide you with a versatile computer recording system.

While we have designed Focusrite Control to be as intuitive and task-oriented as possible, all users will benefit from reading through this Guide, as a full understanding of the software's features can only be gained by considering it in partnership with the connected hardware.

#### **IMPORTANT**

The Scarlett range of interfaces consists of several different models, all of which use Focusrite Control. The fundamental difference between these models is the number of inputs and outputs each has, plus the number of features controlled directly from Focusrite Control.

Focusrite Control will recognise the particular Scarlett hardware to which your computer is connected, and configure itself accordingly. Therefore you will only see on-screen references to the inputs and outputs your hardware actually supports.

Because of this automatic configuration, this User Guide is applicable to all the models in the Scarlett range, though its primary application is with the larger models in the Scarlett range, i.e., Scarlett 4i4 and above (also see NOTE below). We felt it would be confusing to illustrate the Guide with screenshots from more than one model, therefore we have settled to use the Scarlett 18i20 as the "reference" model. If your Scarlett is an 18i20, the screenshots in this Guide will match what you see on your screen. If you've got a different model, the only significant differences in screen appearance will be in the numbers of available inputs and outputs, and software-controlled features.

#### NOTE: Scarlett 2i2 and Solo Users only

Although software control is limited in these models, it is still necessary to install Focusrite Control to enable full device functionality at sample rates higher than 48 kHz, and for firmware updates. However, for general operation, you do not need have Focusrite Control running on your computer to use the hardware interface.

## System Requirements

#### **IMPORTANT**

The easiest way to check your computer's operating system (OS) is compatible with your Scarlett is to use our Help Centre's compatibility articles:

#### support.focusrite.com/hc/categories/200693655

As new OS versions become available over time, you can continue to check for further compatibility information by searching our Help Centre at <u>support.focusrite.com</u>.

## Software Installation

All software required by the Scarlett is available to download from the Focusrite website (<u>focusrite.</u> <u>com/register</u> and <u>focusrite.com/downloads</u>). Focusrite Control can be downloaded as part of the Easy Start process, and found on the downloads page.

#### Installation during online setup process

When you first connect your Scarlett, it will initially be in Easy Start mode and will guide you through the online setup process.

- 1. Double click on the 'Scarlett' device displayed when you connect your Scarlett to your computer, and select **Click here to get started**.
- 2. You will then begin the interactive online setup process.
- 3. On the Ok, Let's install the essential software page download Focusrite Control.
- 4. Install the version of Focusrite Control (Mac or Windows) for your computer. Follow the onscreen instructions to install the software.
- 5. On Windows, restart your computer following installation.
- 6. Following this, you should see the message below appear:

# Your Scarlett is currently in Easy Start mode (Quick Start). Please click OK to restart your Scarlett and complete the online setup process. (Cancel/OK)

This will take the device out of Easy Start mode and update the firmware if necessary.

7. Once back to the online setup web page, please complete the Scarlett setup procedure.

#### Installation independent of online setup process

- 1. Go to <u>focusrite.com/downloads</u>.
- 2. From here select your product from the drop down list (all 3rd Generation Scarletts use Focusrite Control).
- 3. Download and install the version of Focusrite Control (Mac or Windows) appropriate for your computer. Follow all on-screen instructions to install the software.
- 4. Once your computer has restarted, Focusrite Control should identify your Scarlett model, allowing you to control the internal settings of the device.

This information is accurate as of September 2021, however we are striving to improve the customer experience and as a result this process 4 is subject to change. If anything appears to have changed please refer to <u>focusrite.com/get-started</u> for the latest info.

# The Scarlett Mixer – basic principles

Your Scarlett interface contains an internal audio mixer which allows you to create one or more mixes of the various audio sources in your system, and send them to the physical outputs of your interface. These sources include tracks you have recorded on your DAW as well as the sources connected to the Scarlett's various physical inputs. Before starting to use Focusrite Control, it is a good idea to gain an understanding of the basic principle of this mixer.

#### IMPORTANT

The Maximum simultaneous mixing capacity for the Scarlett 18i20 is: 24 mono inputs to 12 mono outputs. This varies by interface, to find out the maximum mixing capacity for your interface, please see the specification table in its user guide.

**NOTE**: This mixer capacity allows a maximum of 6 custom mixes in mono or stereo



# **OUTPUT ROUTING PAGE**

 $\mathbf{d}_{\mathbf{c}}$ 

Installing Focusrite Control on your computer will place the Focusrite Control icon on the desktop (Windows) or in the Applications folder (macOS).

Click the icon to launch Focusrite Control. You will see a screen similar to below:



#### NOTE

If you get a **No Hardware Connected** warning message, this means the computer has been unable to communicate with the Scarlett hardware.

Please check:

- The USB cable is correctly plugged in at both ends, and the cable or connectors are not damaged in any way,
- The Scarlett interface is turned on.

If you continue to see this error message, please click the question mark ? in the bottom left corner of Focusrite Control.

The green **sync** 'LED' at the screen top left should be illuminated; this confirms the Scarlett device is locked to a valid clock source. See page 31 for further information.

# Configuring and controlling the mixer

#### NOTE

To help you use the software, Focusrite Control provides a set of tool tips; when you hover the cursor over any of the controls, a description of what the control does appears in the status bar at the bottom of the window.

Click **File** > **Presets** > **Empty**. Other Presets are available which load up pre-configured mixer settings – these are often useful starting points for the task you're performing. But **Empty** loads a "blank" template, with no input channels visible.



Focusrite Control only has two pages – Input Settings and Output Routing. These are selected by the tabs at the top of the window. The Device Settings pane opens when you click the "cog" icon at the top of the window – this is covered later in the manual.

The Output Routing page is divided into three areas:

- **OUTPUTS** arranged vertically to the left.
- **HARDWARE INPUTS** to the right, occupying the upper half of the page.
- **SOFTWARE (DAW) PLAYBACK** to the right, occupying the lower half of the page.

# The Output section

Let's look at the Output section first, as this is always visible while the Output Routing page is selected.

**OUTPUTS** has a vertical scroll bar; if your hardware interface has more outputs than can be fitted on the screen, scroll down to see the rest. Each output (or pair of outputs if in stereo mode) has its own tab, each of which has the following features:



- Output identifier (e.g., Line Outputs 3-4) and icon in addition to the name of the output, icons are used to aid identification: you'll notice speaker and headphone symbols as well as jack plug, phono plug and TOSLINK symbols.
- 2. Custom name you can click this field and enter a name of up to 11 characters.
- 3. Current source this field displays the name of the signal currently feeding the output. In many setups, particularly when using Focusrite Control's presets, this will be by default, one input or a stereo pair of inputs. Clicking on the field opens a drop-down list letting you select:
  - **Playback (DAW)** lets you route any of the DAW tracks to the output (in pairs when the output is stereo). Playback (DAW) 1-2 is the main output of most DAWs and software applications, e.g., your web browser and media applications.



- Custom Mix lets you create a mix of all available inputs (both hardware and those from the DAW) to the selected output. If all your custom mixes have already been assigned this option is not available.
- Hardware Input this lets you specify a hardware input to route directly to this output.
- **Custom Mix + Talkback** (Scarlett 18i20 only) this is the same as **Custom Mix**, but also routes the device's internal mic is to this output when **TALKBACK** is activated.

As you change the source selection for an output, the right hand side of the window displays a graphic to illustrate the routing. For one-to-one routings, the graphic looks like this:



- 4. Fader use this to adjust the signal level at the output. Note that all output levels are set to maximum as a default (unity gain). If the fader "knob" is green, it means control of the output level is assigned to the physical **MONITOR** control on the Scarlett's front panel. This assignment is made on the **Device Settings** page; see page 29. Note that digital outputs do not have faders.
- 5. **MUTE** click this button to mute/unmute the output.
- 6. **STEREO** assigns the output to be either one of a stereo pair or an individual mono output. In stereo mode, all output functions apply to both outputs forming the stereo pair.
- 7. Meters a bargraph meter (two if configured for stereo operation) indicates the audio level at the output. A red audio overload icon appears when the output level clips. This icon can be cleared by clicking anywhere in the meter bar.

The Monitor Outputs have one additional control, a **DIM** button - this is only applicable to outputs assigned to the Monitor control on the 18i8 and 18i20. This button becomes available only if control of the Monitor Outputs is assigned to the front panel hardware controls in **Device Settings**. When active, **DIM** reduces the level in the monitors (the reduction depends on the Scarlett connected).

## The Mixer section

The Input section is divided into two: **HARDWARE INPUTS** and **SOFTWARE (DAW) PLAYBACK**. The two halves of the Input area are where you control the inputs to your mix for the selected output.

It is important to remember you can create a different mix for each output, and you can have as many mixes as your Scarlett's internal mixer allows. This is useful when recording a group of musicians, as it means each musician can have their own mix, personalised to their requirements. To see the mix sent to each output, click the output tab on the left and the mixer will appear on the right side of Focusrite Control.

#### **IMPORTANT**

It is not possible for the mixes for each output to be made up of a different set of inputs. The set of input channels is 'global'. They will appear across all outputs. However, individual mixes, with individual levels, are possible as you can mute unwanted channels.

For some situations a one-to-one direct routing Focusrite Control sets up (as in the previous example) will work. Outputs of your DAW are directly routed to the hardware outputs on your Scarlett interface (i.e., no internal mixing within the unit). But in many cases, you will want to set up the mix yourself. To create a new mix, click the current source button in the Output tab for the output you want the mix to be fed to, and select **Custom Mix**. This will clear the current fixed routing for the output and display the Input mix area (this area will be empty if the **Empty** preset was selected earlier):



You can now "build" the mixer to feed the Output by clicking on the two '+' tabs. Each will open a selection box: the **HARDWARE INPUTS** half lists all the Scarlett's physical inputs (see page 13 for details of hardware inputs), while in the **SOFTWARE (DAW) PLAYBACK** area, the box lists available DAW tracks. You can add channels up to the maximum capacity of your Scarlett hardware. You may need to resize the window or use the horizontal scroll bar when the number of channels starts to exceed the window size.



In both boxes, each input is listed twice: individually (mono) and as half of a stereo pair. Selecting a stereo pair of inputs creates a stereo input channel.



This example shows an overdub: several DAW tracks have already been recorded, two additional tracks are going to be recorded and we wish to create a stereo foldback mix for one of the musicians.

Each input channel has the following features:



- 1. Input identifier this is the actual physical input to the channel.
- 2. Custom name you can click this field and enter a name e.g., the instrument in question of up to 11 characters.
- 3. Fader use this to adjust the level of the signal in the mix. Note that the default setting for all faders is 0 dB, while "fader max" is at +6 dB. Double-clicking in the fader "slot" will set the fader at 0 dB.
- 4. Fader value a numeric readout of the current fader position.
- 5. M click this button to mute/unmute the channel.
- 6. s Solo button. Clicking this will let you hear only this channel, replacing the mix there previously. This is useful function during recording as it allows the engineer to check the instrument being recorded without the distraction of the rest of the tracks. The Solo function does not alter any other signal routings, and does not interrupt the signal being recorded into the DAW.
- 7. Pan slider. This control is only available when the mix is being routed to a stereo output. Its default position is central, and the signal in the channel is sent at equal levels to both outputs of the stereo pair. Moving the slider either way sends a higher signal level to one output than the other, thus making it possible to "position" individual instruments at particular place in the stereo image. Double-clicking in the slider "slot" will set the control in the central position.
- 8. Signal level meter. This indicates the signal level coming into the channel, i.e., pre-fade. It is scaled in dBFS units, with 0 dBFS at the top of the scale. 0 dBFS corresponds to digital clipping, which sounds unpleasant; levels should always be adjusted to avoid this situation. Stereo channels have two meters, one either side of the fader.
- 9. Peak level display a numerical readout of the maximum signal level reached. Stereo channels have two displays. If a signal reaches clip level, **CLIP** is displayed in red; this may be cleared by clicking on it, or by selecting **Clear all meters** from the **File** menu.
- 10. Close click on the cross to remove the signal from the mix and the channel from the screen.

#### Hardware Inputs available on Scarlett devices

Your Scarlett interface provides a wide range of audio inputs, however the number available depends on what sample rate it is set to (see page 30 for further details). Doubling the sample rate halves the number of ADAT channels available. The tables below provide details of what inputs are available to you when operating at different sample rates.

	44.1 kHz - 48 kHz							
Input	Scarlett 18i20	Scarlett 18i8	Scarlett 8i6	Scarlett 4i4				
1	Input 1	Input 1	Input 1	Input 1				
2	Input 2	Input 2	Input 2	Input 2				
3	Input 3	Input 3	Input 3	Input 3				
4	Input 4	Input 4	Input 4	Input 4				
5	Input 5	Input 5	Input 5	Loopback 1				
6	Input 6	Input 6	Input 6	Loopback 2				
7	Input 7	Input 7	S/PDIF In 1					
8	Input 8	Input 8	S/PDIF In 2					
9	Loopback 1	S/PDIF In 1	Loopback 1					
10	Loopback 2	S/PDIF In 2	Loopback 2					
11	S/PDIF In 1	Loopback 1						
12	S/PDIF In 2	Loopback 2						
13	ADAT In 1.1	ADAT In 1.1						
14	ADAT In 1.2	ADAT In 1.2						
15	ADAT In 1.3	ADAT In 1.3						
16	ADAT In 1.4	ADAT In 1.4						
17	ADAT In 1.5	ADAT In 1.5						
18	ADAT In 1.6	ADAT In 1.6						
19	ADAT In 1.7	ADAT In 1.7						
20	ADAT In 1.8	ADAT In 1.8						

	88.2 kHz - 96 kHz						
	Scarlett 18i20		Scarlett 18i8	Scarlett 8i6	Scarlett 4i4		
Input	ADAT mode	S/PDIF mode					
1	Input 1	Input 1	Input 1	Input 1	Input 1		
2	Input 2	Input 2	Input 2	Input 2	Input 2		
3	Input 3	Input 3	Input 3	Input 3	Input 3		
4	Input 4	Input 4	Input 4	Input 4	Input 4		
5	Input 5	Input 5	Input 5	Input 5	Loopback 1		
6	Input 6	Input 6	Input 6	Input 6	Loopback 2		
7	Input 7	Input 7	Input 7	S/PDIF In 1			
8	Input 8	Input 8	Input 8	S/PDIF In 2			
9	Loopback 1	Loopback 1	S/PDIF In 1	Loopback 1			
10	Loopback 2	Loopback 2	S/PDIF In 2	Loopback 2			
11	ADAT In 1.1	S/PDIF In 1	Loopback 1				
12	ADAT In 1.2	S/PDIF In 2	Loopback 2				
13	ADAT In 1.3	ADAT In 1.1	ADAT In 1.1				
14	ADAT In 1.4	ADAT In 1.2	ADAT In 1.2				
15	ADAT In 2.1	ADAT In 1.3	ADAT In 1.3				
16	ADAT In 2.2	ADAT In 1.4	ADAT In 1.4				
17	ADAT In 2.3						
18	ADAT In 2.4						

	176.4 kHz - 192 kHz							
Input	Scarlett 18i20	Scarlett 18i8	Scarlett 8i6	Scarlett 4i4				
1	Input 1	Input 1	Input 1	Input 1				
2	Input 2	Input 2	Input 2	Input 2				
3	Input 3	Input 3	Input 3	Input 3				
4	Input 4	Input 4	Input 4	Input 4				
5	Input 5	Input 5	Input 5					
6	Input 6	Input 6	Input 6					
7	Input 7	Input 7	S/PDIF In 1					
8	Input 8	Input 8	S/PDIF In 2					
9	S/PDIF In 1	S/PDIF In 1						
10	S/PDIF In 2	S/PDIF In 2						

# **Using Output Presets**

Focusrite Control comes with some useful Output Presets, which have been designed to get you started on a recording task quickly. Selecting an Output Preset automatically configures output routing and the mixer for you, setting up various useful combinations of input channels.

Output Presets are selected from the **File** menu; select Output **Presets** from the drop-down list. The Output Presets available with the Scarlett 18i20 are shown below:



#### **Direct Routing**

With complex mixing sessions, it is sometimes desirable to perform the final mix in a separate, physical mixing console. The **Direct Routing** Output Preset configures the Scarlett for this task, as it routes DAW playback tracks in numerical order to all the available Scarlett outputs.

•••	Focusrit	e Control	
Sync ☆ Main Alt	Talk Input Settings	Output Routing	Focusrite
OUTPUTS			
Monitor Outputs 1-2 Payback 1-2 MUTE DIM STEADO		Software Playbook	
Line Outputs 3-4		Software Playback	
Line Outputs 5-6			
Playback 5-6		(1) (2)	
MUTE			
Line Outputs 7-8			
Playback 7-8			
MUTE STEREO			
Click to view the mix for Monitor Outputs 1-2			

			44.1 kHz - 48	kHz			
DANA		Scarlett 18i20					
DAW track	S/PDIF	Optical S/PDIF	Dual ADAT	Scarlett 18i8	Scarlett 8i6	Scarlett 4i4	
1	Output 1	Output 1	Output 1	Output 1 (S/PDIF L)	Output 1 (HP 1L)	Output 1	
2	Output 2	Output 2	Output 2	Output 2 (S/PDIF R)	Output 2 (HP 1R)	Output 2	
3	Output 3	Output 3	Output 3	Output 3	Output 3 (HP 2L)	Output 3 (HP L)	
4	Output 4	Output 4	Output 4	Output 4	Output 4 (HP 2R)	Output 4 (HP R)	
5	Output 5	Output 5	Output 5	Headphones 1L	S/PDIF Out 1		
6	Output 6	Output 6	Output 6	Headphones 1R	S/PDIF Out 2		
7	Output 7	Output 7	Output 7	Headphones 2L			
8	Output 8	Output 8	Output 8	Headphones 2R			
9	Output 9	Output 9	Output 9				
10	Output 10	Output 10	Output 10				
11	S/PDIF Out 1	S/PDIF Out 1*	S/PDIF Out 1				
12	S/PDIF Out 2	S/PDIF Out 2*	S/PDIF Out 2				
13	ADAT Out 1.1	ADAT Out 1.1	ADAT Out 1.1				
14	ADAT Out 1.2	ADAT Out 1.2	ADAT Out 1.2				
15	ADAT Out 1.3	ADAT Out 1.3	ADAT Out 1.3				
16	ADAT Out 1.4	ADAT Out 1.4	ADAT Out 1.4				
17	ADAT Out 1.5	ADAT Out 1.5	ADAT Out 1.5				
18	ADAT Out 1.6	ADAT Out 1.6	ADAT Out 1.6				
19	ADAT Out 1.7	ADAT Out 1.7	ADAT Out 1.7				
20	ADAT Out 1.8	ADAT Out 1.8	ADAT Out 1.8				

Direct routing connections for the Scarlett range are as follows:

\*RCA and Optical

	88.2 kHz – 96 kHz							
		Scarle	tt 18i20		Casalatt	Coordott	Casalatt	
track	S/PDIF	Optical S/PDIF	Dual ADAT	Dual ADAT Output Preset	Scarlett 18i8	Scarlett 8i6	Scarlett 4i4	
1	Output 1	Output 1	Output 1	Output 1	Output 1 (S/PDIF L)	Output 1 (HP 1L)	Output 1	
2	Output 2	Output 2	Output 2	Output 2	Output 2 (S/PDIF R)	Output 2 (HP 1R)	Output 2	
3	Output 3	Output 3	Output 3	Output 3	Output 3	Output 3 (HP 2L)	Output 3 (HP L)	
4	Output 4	Output 4	Output 4	Output 4	Output 4	Output 4 (HP 2R)	Output 4 (HP R)	
5	Output 5	Output 5	Output 5	Output 5	Headphones 1L	S/PDIF Out 1		
6	Output 6	Output 6	Output 6	Output 6	Headphones 1R	S/PDIF Out 2		
7	Output 7	Output 7	Output 7	Output 7	Headphones 2L			
8	Output 8	Output 8	Output 8	Output 8	Headphones 2R			
9	Output 9	Output 9	Output 9	Output 9				
10	Output 10	Output 10	Output 10	Output 10				
11	S/PDIF Out 1	S/PDIF Out 1*	S/PDIF Out 1	ADAT Out 1.1				
12	S/PDIF Out 2	S/PDIF Out 2*	S/PDIF Out 2	ADAT Out 1.2				
13	ADAT Out 1.1	ADAT Out 1.1	ADAT Out 1.1	ADAT Out 1.3				
14	ADAT Out 1.2	ADAT Out 1.2	ADAT Out 1.2	ADAT Out 1.4				
15	ADAT Out 1.3	ADAT Out 1.3	ADAT Out 1.3	ADAT Out 2.1				
16	ADAT Out 1.4	ADAT Out 1.4	ADAT Out 1.4	ADAT Out 2.2				
17			ADAT Out 2.1	ADAT Out 2.3				
18			ADAT Out 2.2	ADAT Out 2.4				

\*RCA and Optical

	176.4 kHz – 192 kHz								
		Scarlett 18i20							
track	S/PDIF	Optical S/PDIF	Dual ADAT	Scarlett 18i8	Scarlett 8i6	Scarlett 4i4			
1	Output 1	Output 1	Output 1	Output 1 (S/PDIF L)	Output 1 (HP 1L)	Output 1			
2	Output 2	Output 2	Output 2	Output 2 (S/PDIF R)	Output 2 (HP 1R)	Output 2			
3	Output 3	Output 3	Output 3	Output 3	Output 3 (HP 2L)	Output 3 (HP L)			
4	Output 4	Output 4	Output 4	Output 4	Output 4 (HP 2R)	Output 4 (HP R)			
5	Output 5	Output 5	Output 5	Headphones 1L	S/PDIF Out 1				
6	Output 6	Output 6	Output 6	Headphones 1R	S/PDIF Out 2				
7	Output 7	Output 7	Output 7	Headphones 2L					
8	Output 8	Output 8	Output 8	Headphones 2R					
9	Output 9	Output 9	Output 9						
10	Output 10	Output 10	Output 10						

To use the Output Preset to its full extent with a traditional analogue console, a suitable ADATequipped D-to-A converter and a two-channel D-to-A converter with an S/PDIF input would be required. However, many modern digital mixers are able to accept ADAT and S/PDIF signals directly as well as analogue.

#### 2 Channel Analogue

This is the Output Preset to use when using the Scarlett as your analogue recording "front end". The Preset configures the Scarlett's routing with Analogue Inputs 1 and 2 available as **HARDWARE INPUTS** and DAW tracks 1 and 2 available as a stereo channel in the **SOFTWARE (DAW) PLAYBACK** section.

For example, on the Scarlett 18i20, the summed output of these input channels is routed to Monitor Outputs 1 and 2, and also to Line Outputs 7 and 8, and 9 and 10, as a stereo pair in all cases. On this model, Headphone Outputs 1 and 2 follow Line Outputs 7/8 and 9/10 respectively, with their own front panel headphone levels controls. This setup is ideal for recording a guitarist and a vocalist to a computer drum track, for example, as it enables each to have an individual mix of the drums and each other.



As more tracks are recorded, add additional DAW playback tracks to the mix.

All other Scarlett outputs are sourced directly from the corresponding DAW playback tracks, as per the Direct Routing table on page 16.

#### 8 Channel Analogue

Use this Output Preset as a starting point when recording a band. On the Scarlett 18i20, this Preset enables eight mixer channels, one for each of the hardware analogue inputs. DAW tracks 1 & 2 are also enabled as a stereo channel.



As with the 2 Channel Analogue Preset, the summed output of the mixer is routed to Monitor Out 1 and 2, and Line Outs 7 to 10 as a stereo pair.

All other Scarlett outputs are sourced directly from the corresponding DAW playback tracks, as per the Direct Routing table on page 16.

## Digital

This Output Preset is a useful starting point when using a separate ADAT-equipped microphone preamplifier such as the Scarlett OctoPre. When used with the Scarlett 18i20 it enables ten digital input channels, eight sourced from the ADAT input port and two from the S/PDIF input. DAW tracks 1 and 2 are also enabled as a stereo channel. The sum of the inputs is routed to the same pairs of outputs as with the analogue Presets described previously.



All other Scarlett outputs are sourced directly from the corresponding DAW playback tracks, as per the Direct Routing table on page 16.

#### Empty

This may often be the most convenient Output Preset to use as it clears all existing setups to allow the user to start building their own configuration as required.

On the Scarlett 18i20, Monitor Out 1 and 2 and Line Outs 7 to 10 (paralleled as the headphone outputs) are set to receive a custom mix; all other outputs are sourced from individual DAW tracks, as with the other Presets.

## Examples of Use

#### **Recording and Tracking**

Recording a band or recording yourself is the same process as far as Focusrite Control is concernedthe only difference is the number of mixer channels you'll have on screen.

Connect the instruments to be recorded to the Scarlett interface, either directly using the INST or LINE inputs, or - for acoustic instruments and vocals - with microphones connected to the MIC inputs. Each instrument or microphone will be routed to your DAW via the USB cable, and will be recorded - by default - on the track with the same number as its hardware input. Set the recording levels by adjusting the gain controls on the Scarlett front panel. Your DAW will allow you to alter the track assignment if you wish.

Focusrite Control lets you create a monitor mix of everything being recorded. The mix you hear in your monitors or headphones can be anything you want from both hardware inputs and software playback, and is independent of the signal levels being recorded.

All Focusrite Control channels start out with the fader position at zero, so you will hear a rough mix as soon as you have everything connected up. You can then tweak the mix to suit your requirements.



When loading any of the Output Presets other than **Direct Routing**, the mix available at your headphone outputs will be identical to your main monitor mix. However they are independent and are controlled separately. For example, if you want to use the headphones for a musician's foldback, you will need to set up a different mix. Select the output tab for the headphones (**Line Out 7-8** in the Scarlett 18i20 example shown) and change the mix. By the same principle you can create further, different mixes for as many other musicians by using further Line Out tabs and selecting **Custom Mix (or Custom Mix + Talkback** in the case of the Scarlett 18i20).

#### Stand-alone mixer (8i6, 18i8 and 18i20 interfaces only)

Once the Scarlett's internal mixer has been configured by Focusrite Control, that configuration is retained by the hardware even after you remove the USB cable and switch the unit off. This means you can make use of the Scarlett's excellent analogue performance in a live situation, without needing to connect a computer.

An example of this application would be as an on-stage keyboard mixer. Multiple keyboards can be connected to the Scarlett's inputs, and mixed together to the Monitor Outputs. The relative levels of each keyboard can be adjusted from the front panel.

![](_page_22_Figure_3.jpeg)

The setup shown above would configure the mixer as described; because the Scarlett retains its last configuration, the unit can be switched off, and used at the venue as a stand-alone unit.

#### Using the Loopback feature

![](_page_23_Figure_1.jpeg)

Focusrite Control's Loopback feature lets you record audio sources from within your computer (e.g., the audio output from a web browser). Loopback uses the Scarlett's "virtual" inputs, which have no physical connectors on the hardware interface itself, but may be selected in the DAW as signal sources for recording in the same way as any other.

You can select the Loopback output as the source on a mono or stereo DAW track, to record from another software application into your DAW. Your computer will assign DAW 1 and DAW 2 as the default sound output channels.

An example of configuring Loopback in Focusrite Control is given below:

- 1. In the Loopback tab, select the audio source to loop back to your DAW. Default is Playback 1-2.
- 2. In your DAW, ensure the Loopback tracks are enabled for recording.
- 3. Create a new audio track.
- Important! MUTE THE DAW CHANNEL. If you are routing the output of the channel you are recording back to DAW 1 & 2, a feedback loop will be created, potentially damaging for your speakers, or worse – your ears.
- 5. Check the Loopback output is not muted.
- 6. Set the DAW channel to record enable.
- 7. Now, any audio playing on your computer, e.g., a separate audio replay program or from an Internet browser, will be routed into your DAW ready for recording. Hit record in your DAW to capture the audio.

#### **Snapshots**

The mixer in your Scarlett interface retains the last Focusrite Control settings at all times. However, you may wish to save your session settings so you can get back to them at a later time, perhaps when working on a similar project or with a different, compatible hardware device.

Focusrite Control includes a Snapshot facility for this purpose. This takes a "snapshot" of the entire mixer and lets you save it on your computer for later recall. The table below summarises what settings are saved in a snapshot:

Custom name	Mix Name	Output Stereo Link	Monitor Mute	Hardware control settings
Air in/out	Mix Gain	Output Source	Monitor Dim	S/PDIF source
Pad on/off	Mix Pan	Output Mute		Digital I/O Mode
Line/Inst selection	Mix Mute	Output Name		
	Mix Solo	Output Gain		

To save the current mixer settings, click **File > Save Snapshot**.

000			Focusrite Control	
o Sync ✿ Main Ait	Talk	Input Settin	ngs Output Routing	Focusrite
OUTPUTS	HARDWARE INPL	ITS		
	Synth 1 🗙	Synth 2 🗙	Synth 3 $ imes$ Synth 4 $ imes$	
		_•   •		
Monitor Outputs 1-2				
Custom Mix				
MUTE DIM STEREO	<u>-12</u> <u>-12</u>	<u>-12</u> <u>-12</u>	<u>-12</u> <u>-12</u>	
	<u></u>	- 00		
Line Outputs 3-4		Save As:	KeyboardMix-Standalone	
Playback 3-4	M S	Tags:		
MUTE STEREO	Analogue 1-2	Ana Where:	FC Snapshots	
	SOFTWARE (DAW	) PLA		
			Cancel Sav	e
Line Outputs 5-6				
Playback 5-6				
MUTE STEREO				
	+			
Custom Mix				
MUTE STEREO				

Session files are saved with a **\*.ff** file extension. To recall a session file, click **File > Load Snapshot**, which opens a standard File Open box; navigate to the where you saved the file and open in the usual way.

![](_page_25_Figure_1.jpeg)

# **INPUT SETTINGS**

Scarlett interfaces have a variety of hardware functions operated from Focusrite Control, rather than by physical controls on the unit itself. Clicking on **Input Settings** gives you access to these functions. The page for the Scarlett 18i20 looks this:

• • •			Focusrit	e Control		
o Sync	🗱 Main	Alt Talk	Input Settings	Output Routing		Focusrite
		Analogue 1			Analogue 2	
LINE	INST	AIR	PAD	LINE INST	AIR	PAD
		Analogue 3			Analogue 4	
	AIR		PAD	AIR		PAD
		Analogue 5			Analogue 6	
	AIR			AIK		PAD
		Analogue 7			Analogue 8	
	AIR		PAD	AIR		PAD

If you have a different Scarlett, the functionality will be the same, but fewer switches and channels will be visible.

# Inst/Line

Some channels on your interface are configurable as instrument inputs to connect electric guitars or basses directly. Select **INST** for these channels to switch the ¼" jack contacts to a high impedance, unbalanced input. INST mode is confirmed by a red LED on the front panel. Depending on the Scarlett model you have, you may be able to select INST or LINE from the front panel of the unit as well.

The alternative switch position for these channels is **LINE**; in this mode, the inputs are suitable for a standard balanced line level signal.

Use a 2-pole (TS) ¼" jack when using the inputs in INST mode, and a 3-pole (TRS) ¼" jack when using them in LINE mode with a balanced source.

All the channels on your interface can accept dynamic or condenser microphones. The Combo-type connectors sense either an XLR plug or a jack plug, and reconfigure the pre-amplifier for mic or line automatically. The channels which have the INST function use the same connector. If you are connecting a microphone with an XLR plug, the **INST/LINE** switch will have no effect.

## Pad

Some channels on your Scarlett interface (model dependent) have a PAD function: when selected, the signal level fed to your DAW is reduced by 10 dB. You will find this useful if the output level of your source is particularly "hot", when you might notice clipping or the gain halo turning red, even at minimum gain. On the Scarlett 18i20 you can also select PAD from the front panel. Each channel with the PAD function has a green **PAD** LED which illuminates when PAD is active.

## Air

An important feature of all 3rd Generation Scarlett interfaces is Focusrite's AIR function. Selectable on all mic input channels, AIR subtly modifies the preamp's frequency response to model the sonic characteristics of our classic transformer-based ISA microphone preamps. When recording with good quality microphones, you will notice an enhanced clarity and definition in the important mid to high frequency range, where it is most needed for vocals and many acoustic instruments.

On some Scarlett models, you can also select AIR from the front panel of the interface. Each channel with the AIR function has a front panel yellow **AIR** LED to indicate when AIR is selected.

# **DEVICE SETTINGS**

Click on the cog icon 🐲 to open the Device Settings pane, which slides out from the left of the screen; click the icon again to close it. The Device Settings pane lets you make various global settings to the hardware interface which will remain in force until you change them. The pane for the Scarlett 18i20 is shown below:

Focusrite Control 3.0.0.1627
ScarlettG3 18i20 Firmware: 1552 Scarlett18i20
Sample Rate Clock Source 48 kHz  Internal Sync Status Locked
Digital I/O Mode (Device restart required)
Speaker Switching Enable Disable
Monitor Controls • 1-2 • 1-4 • 1-6 • 1-8 • All • None

# **Monitor Controls**

It is convenient to adjust your main monitoring volume with a conventional rotary control. Scarlett interfaces have a **MONITOR** control on the front panel for this purpose. However, further configuration of this control is available for the 18i20 and 18i8 when using Focusrite Control.

By default, the MONITOR control adjusts the level at Monitor Outputs 1 and 2 while also providing Mute and Dim control. If you are using some of the Scarlett's other outputs for secondary speakers – typically nearfield, though also in LCR or surround setups – you can assign the rotary control, Mute and DIM switches to affect them as well. Note that on the Scarlett 18i20, the interface also has physical Mute and DIM switches on the front panel.

Monitor Controls
• 1-2
O 1-4
O 1-6
O 1-8
O All
O None

The options are:

- 1-2 Monitor Outputs 1 & 2 (default setting)
- 1-4 Monitor Outputs 1 & 2 and Line Outputs 3 & 4
- 1-6 Monitor Outputs 1 to 4 and Line Outputs 5 & 6 Scarlett 18i20 only
- 1-8 Monitor Outputs 1 to 4 and Line Outputs 5 to 8 Scarlett 18i20 only
- All Monitor Outputs 1 to 4 and Line Outputs 5 to 10 Scarlett 18i20 only
- None The rotary control is disabled; output levels may still be controlled from the software faders.

**NOTE:** If you assign outputs 7-8 and 9-10 to monitor controls, the monitor dial will affect the level of the headphone outputs as they are shared.

In the Output tabs on the **Output Routing** page, the fader "knob" will be green for the outputs assigned to the hardware rotary control. This means the on-screen fader is inoperative and you have to adjust the level of those outputs from the front panel. However, the on-screen fader position, plus Mute and Dim status will reflect the hardware control's operation.

## **Speaker Switching**

The Scarlett 18i8 and 18i20 support Speaker Switching, which lets you swap between two pairs of monitoring speakers easily.

To use Speaker Switching, first click on **Speaker Switching > Enable**, and select **MAIN** or **ALT** at the top of the main page. On the Scarlett 18i20, you can also use the **ALT** button the front panel of the interface. The **ALT** LED illuminates when ALT is selected. When **MAIN** is selected, the **ALT** Outputs are muted, and vice-versa. Note that on disabling Speaker Switching, both **MAIN** and **ALT** outputs will be muted: also any additional outputs which have been assigned to the rotary **MONITOR** control will be muted. This is a safety feature and the outputs will need to be unmuted (in the Output tabs) as they are required.

# Sample Rate

![](_page_29_Figure_13.jpeg)

Your Scarlett interface is able to operate at any of six sample rates: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz and 192 kHz. The default sample rate is 48 kHz. Select an alternative sample rate if needed. Higher sample rates will generally reduce the total number of channels available – see your interface User Guide for more information.

#### IMPORTANT

Note that the optical input is disabled when sample rates of 176.4/192 kHz are is use. Custom mixes are also disabled at these sample rates.

## **Clock Source**

![](_page_30_Picture_1.jpeg)

Interconnected digital audio equipment must always use the same reference clock source. Your Scarlett interface is able to synchronise from three sources:

- **Internal** the internally generated reference clock. This is the default selection.
- **S/PDIF** the embedded clock signal in a signal at the S/PDIF IN connector. (Note that S/PDIF may be applied to either the RCA connector or an optical port on the Scarlett 18i8 or 18i20. Ensure that if you are using the optical port to receive S/PDIF, the signal from device you are connecting has embedded clock.)
- ADAT the embedded clock signal in a signal at the OPTICAL IN connector.

Whichever source is selected, the clock signal is available at the Scarlett's **WORD CLOCK OUT** rear panel BNC socket to allow synchronisation with other digital equipment (only on 18i20).

# **Digital Inputs**

![](_page_30_Picture_8.jpeg)

Scarlett models 18i8 and 18i20 have an additional selection available to determine how the S/PDIF and/or ADAT modes are to be used.

#### **IMPORTANT**

Your interface will need to be restarted (i.e., powercycled) after changing the Digital Inputs setting in order for input reconfiguration to take place. **18i8 only** – **s/PDIF source**: this model accepts a S/PDIF signal at either the RCA connector or the optical ADAT input port. Note that when the optical port is used for an S/PDIF input, it cannot be used for ADAT inputs. Also note the optical ports are disabled at sample rates of 176.4 and 192 kHz.

**18i20 only** – **Digital I/O Mode**: this model supports three different Digital I/O Modes, which determine how the interface's S/PDIF input and output, and the four optical ports, function. The mode to be used is selected from the **Digital I/O Mode** drop down. The three modes are:

- **S/PDIF RCA** this is the default mode: the 18i20 will send and receive S/PDIF signals via the coaxial connectors.
- **S/PDIF Optical** use this mode if you need the 18i20 to send or receive S/PDIF signals via an optical connection. If you have selected S/PDIF as the clock source (see above), the 18i20 will use an S/PDIF signal applied optically at an ADAT port as the clock source.
- **Dual ADAT** this mode lets you send and receive eight channels of audio via the ADAT ports at 88.2 or 96 kHz sample rate. Note that in this mode, S/PDIF I/O is disabled at all sample rates, and will not be available at either the RCA connector nor via an optical port.

Further details can be found in the section "Digital I/O Modes" in the Scarlett 18i20 User Guide.

# TROUBLESHOOTING

For all troubleshooting queries, please visit the Focusrite Help Centre at <u>support.focusrite.com</u>.

# **COPYRIGHT AND LEGAL NOTICES**

Focusrite is a registered trade mark. Focusrite Control and Scarlett are trade marks of Focusrite Audio Engineering Limited.

All other trade marks and trade names are the property of their respective owners. 2021 © Focusrite Audio Engineering Limited. All rights reserved.