Pro Tools

Automation & Control Surface Manual




Contents

Control 2802 Fader Automation	Page	3
Automation Overview	Page	3
Automation Setup	Page	3
Recording & Editing Automation Data	Page	4
Automation Safe	Page	5
Control 2802 Control Surface Setup	Page	5
Control Surface Panel Overview	Page	5
Control Surface Setup	Page	6
Control 2802 Control Surface Functions	Page	6
Entering DAW Layer	Page	6
Setup Mode	Page	7
Transport Panel	Page	7
Navigation & Utility Controls	Page	8
Zoom Functions	Page	9
Banking & Nudges Control Surface Tracks	Page	9
DAW Meters	Page	9
Select Mode	Page	10
Record Enable Mode	Page	11
Automation Modes	Page	11
Group Mode	Page	12
Solo & Cut	Page	13
Function Keys	Page	13
Page Keys	Page	13
Pan Encoder Mode	Page	13
I/O Assign Mode	Page	14
Aux Encoder Mode	Page	15
Aux Fader Flip Mode	Page	15
Aux Assign Mode	Page	16
Insert Mode	Page	17
Insert Encoder Control	Page	17
Future Updates	Page	18
Panel Visualisation	Page	19

Mackie HUI™ (Human User Interface) is a registered trademark of LOUD Technologies Inc.

FADER AUTOMATION

Automation

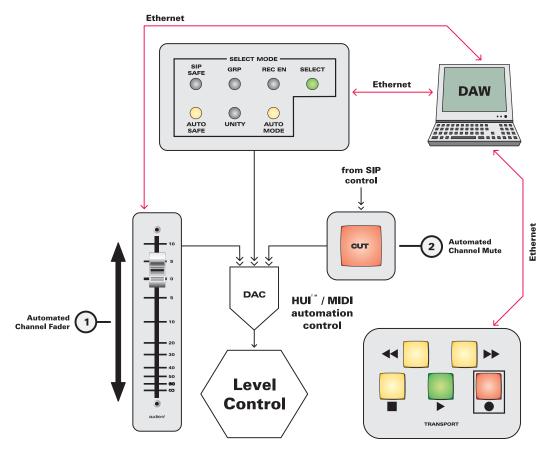

Overview of Functions

The diagram below provides an overview of the automation system and the parameters that can be controlled.

Control 2802 provides fader and mute automation along side its full DAW control surface layer.

The sections of most interest when using the console automation are as follows:

- Faders
- Cut (Mute) Switches
- Select Mode Panel Select and Auto Safe
- DAW Transport

Automation Setup

Assuming that you have followed all steps outlined in the main manual networking section for Apple Mac or PC (page 84 onwards), you will have connected Control 2802 to your studio computer and connected to the console via **Focusrite Control 2802 Software**.

To set up the 8-channel fader automation system in Pro Tools we must use 8 MIDI tracks and place them at the start or end of your session (we recommend the start so you can add tracks afterwards with ease as your session progresses).

Please note that both fader position and mute status is


automatable, therefore you could use the silent muting system to reduce any noise floor from your vintage outboard gear during quiet sections.



Please follow the steps outlined below:

- Boot Pro Tools
- Create a new session or open an existing one

Step 1: Setup > MIDI > Input Devices

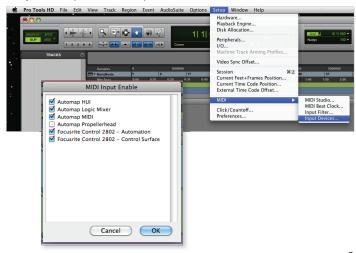

Step 2: Enable Control 2802 Automation & Control Surface MIDI Inputs, click OK.

Step 3: Return to the edit window and create 8 new blank MIDI tracks for control of the Control 2802 fader and mute automation.



It is suggested that you place them at the start of your session so that they do not disturb your normal workflow.

Label the tracks something useful so that they are easy to locate, AUTO1, AUTO2, AUTO3 etc, perhaps with a further addition of whatever source level you are riding, AUTO1 – LDVox, AUTO3 – DrumsL etc.

Step 4: Assign all inputs and outputs on these 8 channels to Control 2802 Automation MIDI ports.



Ensure that these are consecutive numbers, AUTO1 – MIDI1, AUTO 2 – MIDI2 etc



Recording Automation Data in Pro Tools

You must take an Control 2802 channel out of automation safe mode (the default state) before you are free to record automation data to Pro Tools MIDI channels and playback your passes. To do this please see page 8).

To record any automation passes you need onto the 8 MIDI tracks created - just record enable them and let your pass begin.

The MIDI regions can be edited, copied and pasted etc – just like any any other normal MIDI region.

Please note that due to the fact that the control surface peripheral is used for the Control 2802 control surface layer, the analogue automation must use these MIDI tracks to capture your data.

The MIDI controller used here is the modulation wheel, however it is not freely editable. You can copy and paste sections of automation but you cannot freely draw in your own curves and fades. Perhaps recording new passes is the best procedure here if you are unhappy with previous rides.

 


Automation Enable / Safe

A Note on Automation Safe

Automation safe should be used when you want to **isolate** a particular channel from automation – for example – to audition rides without "fighting" existing automation data or without "printing" the rides if channels are still in write enabled.

When the console boots automation safe is engaged by default. If you wish to automate a channel you must first press the automation safe switch (in the select mode panel) and then turn off automation safe from each channel you wish to automate.



Note that all select mode layers are stored and function simultaneously. By toggling the select mode switches in conjunction with the large green channel select switches it is possible to obtain rapid control of SIP safe, DAW record enable, select, unity and automation safe channel settings.


All select mode layers are stored even after a power down, so remember to clear them manually if the next session requires a different setup.

CONTROL SURFACE SETUP Control Surface Panel

Control Surface Operation

The control surface panel on Control 2802 provides access to many common and useful DAW functions.

Please read from page 6 to learn how to setup and operate the Control 2802 control surface.

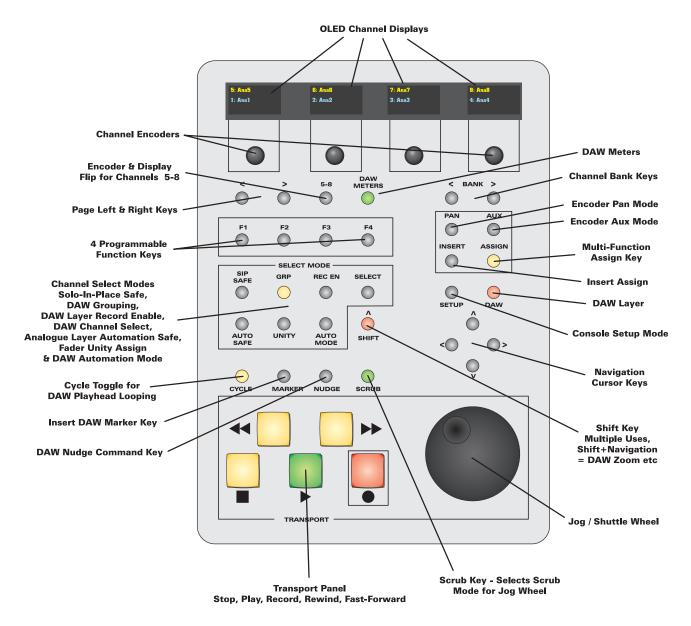

Control Surface Setup

Assuming that you have followed all steps outlined in the main manual networking section for Apple Mac or PC (page 42 onwards), you will have connected Control 2802 to your studio computer and connected to the console via **Control 2802 Software**.

To set up the Control 2802 as a control surface for Pro Tools please follow these steps:




Step 1: Press the Control 2802 Setup button and select Pro Tools in the host software option page using the rotary encoder (press setup to confirm).



Please note that the setup light may flash if you have changed from another host software selection.



Step 2: Exit Control 2802 Setup, boot Pro Tools and navigate to Setup > MIDI > Input Devices

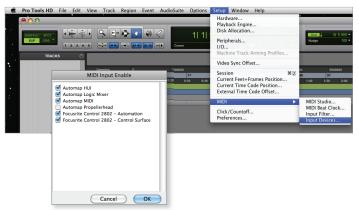


Step 3: Enable Control 2802 Control Surface MIDI Inputs, click OK.

Step 4: Boot Pro Tools, create a new session and navigate to Setup > Peripherals...




Step 5: Click on the MIDI Devices tab

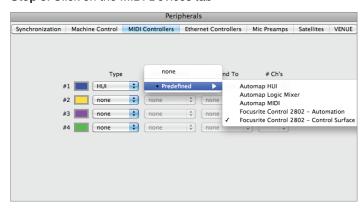

Step 6: Install a HUI[™] control surface, assigning the inputand output MIDI ports to the Control 2802 control surface.

You are ready to use Control 2802.


Click OK.

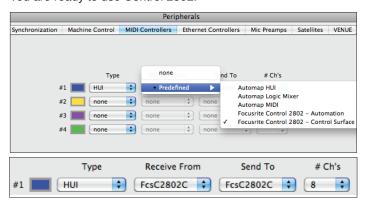

CONTROL SURFACE FUNCTIONS

Entering DAW Layer

To enter the **DAW layer** for control surface functionality ensure that the DAW switch (1) is depressed and **illuminated**.

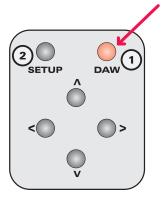

Whenever it is not illuminated, the faders and channel switches operate in the analogue layer.

However some of the control surface functionality remains active when in the analogue layer to aid your session workflow, allowing simultaneous control of both analogue fader level and important DAW functions.

These are:

- Transport switches (3-7) jog / shuttle disabled
- Cycle toggle on / off
- Track / region navigation cursor controls
- Shift + navigation cursor controls for horizontal and vertical zoom
- DAW meters

Console Setup Switch

The **setup** switch (2) allows you to access a number of useful networking parameters as well as set the host DAW platform of choice and check your current firmware revision.

Once the setup switch has been pressed, the OLED displays will show the first page of the setup menu.

To page through various other pages on the OLED displays, whether it be in the setup menu or when accessing insert plugin parameters, use the page function switches (26) located under the left most encoder.



Editing Setup Parameters

To edit parameters in any of the OLED displays when in setup mode, rotate the corresponding rotary encoder to change values and then press the setup switch to apply the changes.




Note that once a change has been made, the setup switch LED will flash to indicate that a setting has changed and will return to a solid red once changes are confirmed.



Console Setup Switch OLED Pages

Setup Page 1 - Host Software

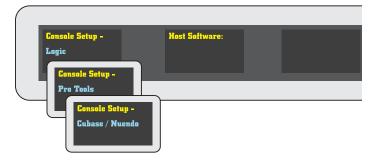

Setup Page 2 - Use DHCP (networking option)



Console Setup Switch

Setup Page 3 – IP Address (networking option)



Setup Page 4 - Subnet Mask (networking option)



Setup Page 5 – Port (default 1212, networking option)



Setup Page 6 - Firmware Info




Transport Panel


The transport panel on Control 2802 provides access to the following functions:

- Rewind (3)
- Fast-Forward (4)
- Stop (5)
- Play (6)
- Record (7)

A jog wheel (8) is also provided and can be used to control several DAW commands.

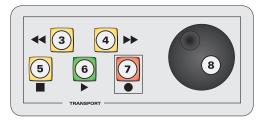

 When operating the **rewind** or **fast-forward** controls (3 & 4) it should be noted that one switch press (released immediately) initiates a playhead movement of one bar or second etc depending upon which ruler is currently active in Pro Tools.



Pressing and holding the switch will produce a finer resolution of rewind or fast-forward until the command is released.

To exit the rewind or fast-forward command just release either switch.


By using the **scrub** function (12) in conjunction with the **jog wheel** (8), the playhead cursor can be used to 'scrub' through the audio within your Pro Tools session in realtime as if 'rocking the tape against the playhead'. This is useful for finding edit points and punch-in locations etc. When in this mode, the scrub switch will illuminated a solid green.

If the **scrub** switch (12) is pressed for a second time, the **jog wheel** (8) performs shuttle operation, providing continuous rewind or fast-forward of the playhead cursor. This is silent and indicated by a flashing green LED in the switch.

A third press on the **scrub** switch (12) toggles back to inactive jog wheel operation, indicated by no switch illumination.


Navigation & Utility Controls

Control 2802 provides several navigation and utility controls just above the transport section.

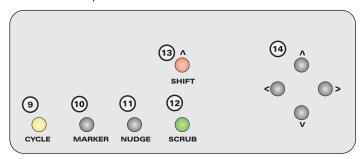

The **cycle** control (9) can be used to toggle Pro Tools's cycle loop playback command on and off.



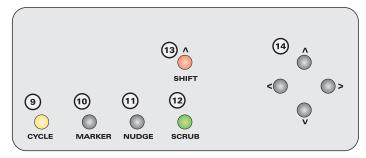

The **marker** control (10) can be used to add memory locations to the marker track in Pro Tools. This may be useful for flagging edit points during a take for example. Tap on the **marker** switch to place a marker in the timeline, a second tap will close the marker window. Multiple tap pairs will place multiple markers at their corresponding timeline positions.



The **nudge** control (11) is currently unsupported in the initial Pro Tools software release.

Please see **www.focusrite.com** for the latest updates to control functionality.

The **navigation cursor controls** (14) can be used to select both regions in your Pro Tools session and actual control surface track selection or just select regions for editing depending upon the state of the Link Track & Edit Selection parameter.



If used with **shift** mode (pressing switch 13), the navigation cursors operate as zoom controls. Vertical audio zoom is achieved with the up & down cursor switches, while horizontal timeline zoom is achieved with the left & right cursor switches.

Track Select Mode



Audio Vertical Zoom Mode



 
Horizontal Zoom Mode






Track Navigation Controls

In order to navigate around your session and bring banks of 8 tracks onto the Control 2802 control surface, there are several switches that are useful.



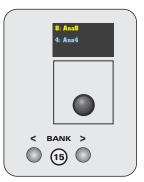

The **bank switches** (15) allow you to 'bank' in eight channel blocks left and right, through either your tracks or arrange page channels (for example 1-8 or 9-16).

If using the **bank switches** (15) in conjunction with the **shift switch** function (13), it is possible to 'nudge' left or right on a channel by channel basis (one at a time).


BANK




NUDGE

To access encoder parameters and / or OLED display information for all eight channels, the 5-8 switch (16) must be used to access the last four channels in the bank of eight.


The channels that are active and available on the encoders are **illuminated in blue**. The encoders can be used to access pan, aux, insert and input / output assigns for the four active channels.

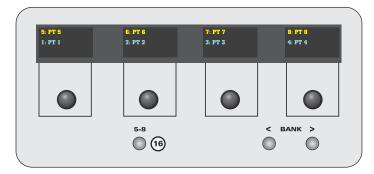


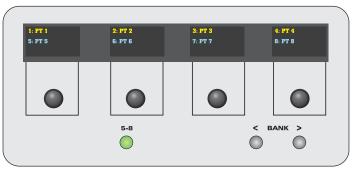


DAW Meters

If you wish to display eight channels of DAW metering on Control 2802's LED bargraph meters, a global command switch (17) **DAW Meters**, provides this functionality.

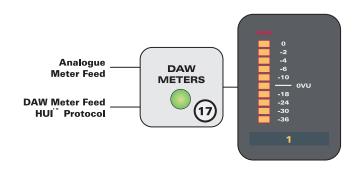

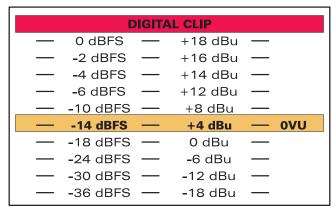



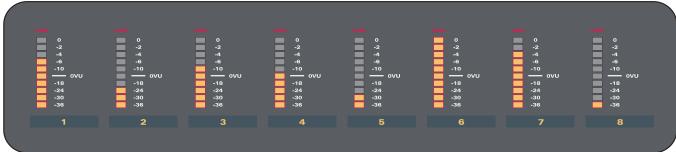



Channel Select Mode

The select mode panel provides various functions, some of which operate on the analogue layer and are useful for automation control (auto safe etc), while others are specifically used for control over DAW functions on the DAW layer.

Above each fader are three illuminated push switches.

 The first switch, **select** (18) can be used for several functions on both analogue and DAW layers when used in combination with the select modes available in the middle of the control surface panel.

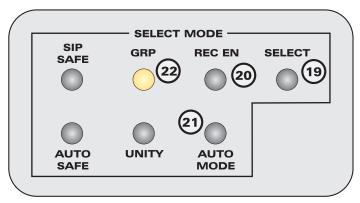



When **select mode** is chosen (19), the large green **channel select switches** above the channel faders become DAW channel selects when in control surface mode. Selected channels are highlighted in white within Pro Tools and a box is shown around the channel name in the Control 2802 OLED display. Multiple channels can be added or removed from larger selections by holding down one or more select switches at once and pressing other channels to add or remove.





Record Enable Mode

Use **record enable** (20) within DAW control surface mode when arming tracks for recording in Pro Tools.



Activate this mode and then use the large green channel select switches (18) to record enable each track active on the eight channel HUI™ bank.



Please note that by using multiple channel select switches (18), you can record enable more than one track at once.

Automation Modes



The automation mode control (21) is used in the DAW layer to set host specific automation modes like read, touch and latch etc.

This control can be used to access automation modes for channels active on the control surface.

The available automation modes in Pro Tools are:

- Read
- Write
- Touch
- Latch
- Trim*
- Off
- * Pro Tools HD only






To access the automation mode selections using the Control 2802 control surface press the **automation mode** switch (21).



Observing the OLED displays, you should see a series of options appear above each encoder. You can page to the right using the page switches (26) to access the next set of options (trim and off). Please note that trim is only available as an option within Pro Tools HD systems.

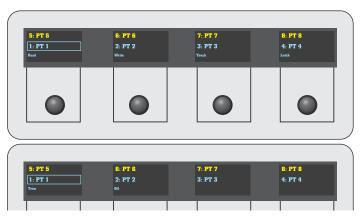

Select whichever tracks you wish to apply the automation mode to using the large green channel select switches (18). Tracks cannot be selected within Pro Tools.






Press down on the encoder below the option you require to apply the setting to the selected channels. Clear the selection if needed.

Group Mode

To access Pro Tools' internal grouping function press the **group mode** switch (22) in the select panel.



The OLED display will update to show the group control options.

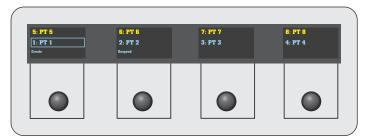

Select the tracks you wish to group by holding down and pressing multiple channel select switches (18) at once.




To create the group press down on the create encoder. This will bring up the group attributes window in Pro Tools. Please note that you can select tracks first and then press the group mode switch (22) to create a group of already selected tracks.


To finalise the group you must click OK from within Pro Tools.

However it is most likely that at this point you will want to name your group and assign group attributes to the selection.

The final group option available on Control 2802 is the global suspend groups function (shift+cmd+g).

This allows you to freely move faders and other track parameters including regions (if using an edit group) without fighting the group linking.

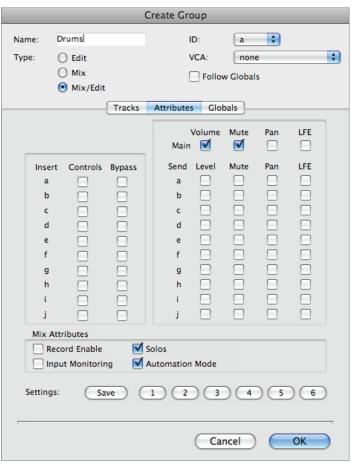

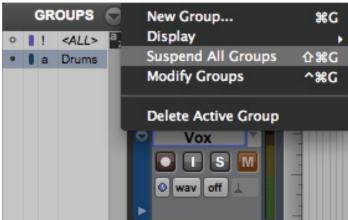

Please note that by holding one fader within a group and moving another, you can adjust the relative balance of the group without needing to suspend all.



Other Select Modes - Analogue Layer.

There are three further select modes available on Control 2802 which are used in the analogue layer.


For more specfic information about the functionality of these modes, please see the main analogue manual.

Solo-In-Place Safe – not used in the DAW layer, please consult the full Control 2802 analogue manual for more information.

Automation Safe – used in the analogue layer for isolating channels from any automation control data, ideal for trying out a new ride before recording the pass of automation.


Unity – used in the analogue layer to provide a quick and easy way to position the channel fader at the unity gain (0 dB) position. This is very useful if you are setting up a stem session for analogue summing etc.

To use these functions press the function required in the select mode panel and then press the large channel select switches (18) on each and every channel that requires the application of the function selected.

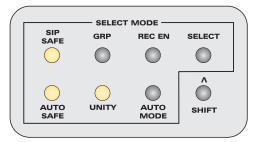

Channel Solo & Cut

 When in **DAW layer** the large channel cut and solo switches (23 & 24) perform mute and solo functionality within Pro Tools.




If you are using any internal Pro Tools grouping you may find it useful to group these functions (Group Attributes) to provide quick and easy solo or cut auditioning across a larger group of channels.



Function Keys

 Function keys F1 to F4 (25) are programmed to provide access to four useful Pro Tools window functions.



Their default configuration is as follows:

- F1 Edit Window
- F2 Mixer
- F3 Open / Close Current Active Plugin Window
- F4 Transport

Page Keys


The page keys (26) are used to page through various parameters that are assigned to the rotary encoders and OLED displays.



If editing aux sends, input and output routing or plugin insert effects, the parameters or host options will often cover more than one page. Scroll left to right through the available parameter pages using the page keys located beneath the left hand encoder.

Encoder Pan Mode


When selecting pan (27) as the encoder mode on the right hand side of the control surface, the encoders become pan controls for channels 1-4 (or 5-8) of the control surface selection.

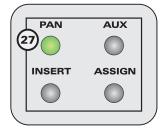

The OLED displays indicate Pro Tools channel pan position with a horizontal slider located beneath the channel name.




 Press the pan switch (27) for a second time to access the righthand pan on a stereo channel.



Pan Mode + Assign

 By pressing the assign key (30) when in pan mode, the encoders provide access to assigning channel inputs and outputs. This is very useful for setting up inputs for recording or bussing architecture when mixing.



Input assigns are set on page one. Use the page keys (26) to access outputs via page two.








To aid you in navigating your studio setup at a faster pace, try using the Pro Tools setup I/O labelling system to name buses something simple (shortform text) and useful.


Pro Tools I/O labelling can increase the speed of your session setup time. If you have a studio that is setup with a fixed routing system and / or a typical 'normalled' signal path, this is a very useful tool. Please bear in mind that the HUI™ protocol only relays 4 characters to the control surface therefore short names may be more useful.



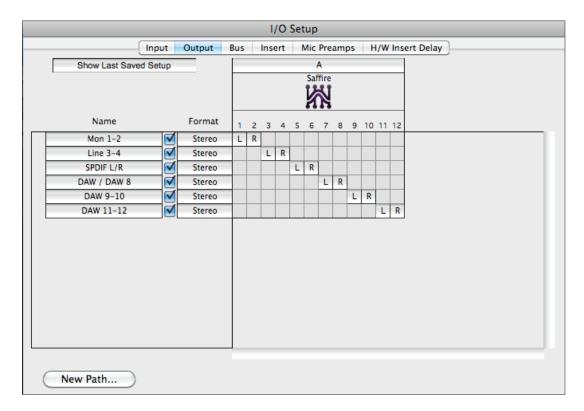

Encoder Aux Mode


When selecting aux (28) as the encoder mode on the right hand side of the control surface, the encoders become aux send controls for channels 1-4 (or 5-8) of the control surface selection.

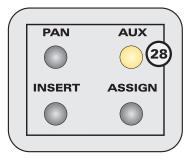

The OLED displays indicate Pro Tools channel send level with a horizontal slider located beneath the channel name.



 Use the page keys (26) to select other available sends (sends A-E).








Aux / Fader Flip


When in aux mode pressing the aux switch (28) again will flip the aux send encoders on to the 8 channel faders. This provides faster access to send levels across an 8 channel bank and is very useful for setting up headphone mixes or fx sends.

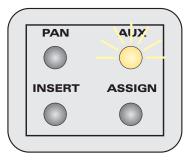

This mode is indicated by a flashing aux switch LED.






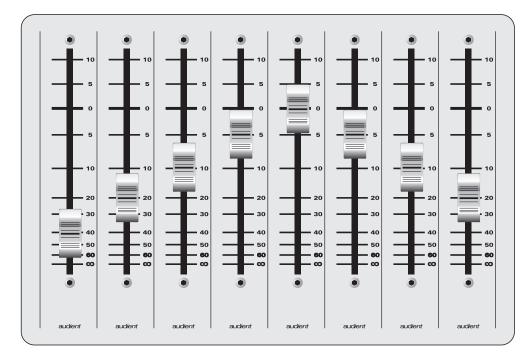

Aux Mode + Assign

When in aux mode, pressing the assign key (30) provides access to instantiating new sends and re-routing existing aux sends within Pro Tools.

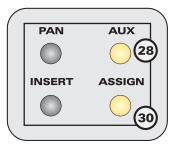

To instantiate a send press the assign key and use the page keys (26) to select the send slot you wish to use (SndA, SndB, SndC, SndD or SndE).

Rotate the encoders to scroll through the available send destination options available within Pro Tools.

Once you have reached your desired send destination, press the encoders on the channel you wish to instantiate the send.


You will notice that the destination state will change from Bus 3 to >Bs3 when the assignment is confirmed.

 


To edit an existing send destination page to the appropriate send slot in assign mode, select a new destination via the rotary encoders and then press the corresponding encoder to reassign.

Insert Mode

The Control 2802 control surface can be used to instantiate and control insert plugins within Pro Tools.

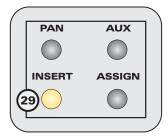



Firstly select the track you wish to instantiate the plugin insert on via the large green channel select switches (18) banking or nudging the control surface if needed.



Once your channel is selected, press the insert switch (29) in the encoder mode panel. Note that the OLED display changes to show you the first available four insert slots. The selected slot will be flashing. To select a different slot press the corresponding encoder.



To instantiate a plugin in the selected slot press the assign switch (30). The OLED display will update to enter assign mode (>NoInsert).



Here you can scroll through the available plugins using the rotary encoders.

To select a plugin for instantiation, rotate the rotary encoder for the corresponding insert slot to scroll through the plugin list. Once the desired plugin is located, press the assign key once more to instantiate the plugin in Pro Tools.





 
At this point you can open the current active plugin window by using the F3 function key (see page 13). Use this function key to also close the plugin once you have finished editing the parameters.




To view and edit the plugin parameters on the OLED displays, press the corresponding rotary encoder once the plugin has loaded and you are out of assign mode.

Insert Editing Mode

To edit plugin parameters use the page switches (26) to navigate through all available parameters.





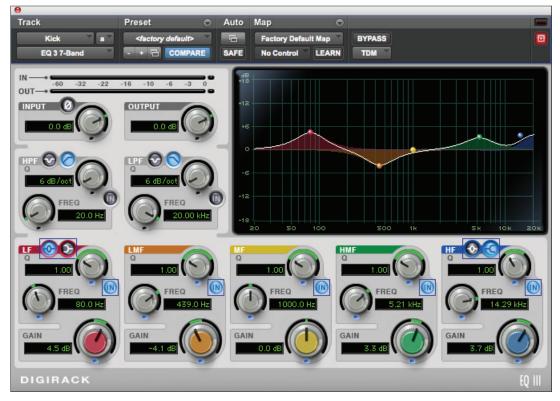

Use the encoders to edit values.

Press the assign switch to exit edit mode and use F3 to toggle (open / close) the plugin window.

Future Updates

For any future updates to the control surface functionality of Control 2802, please see the Control 2802 webpage and latest firmware available online at **www.focusrite.com**.

We hope you enjoy your new control surface and analogue console.

Thanks from the Focusrite team.

Panel Visualisation

