


# Clarett 4Pre

## User Guide

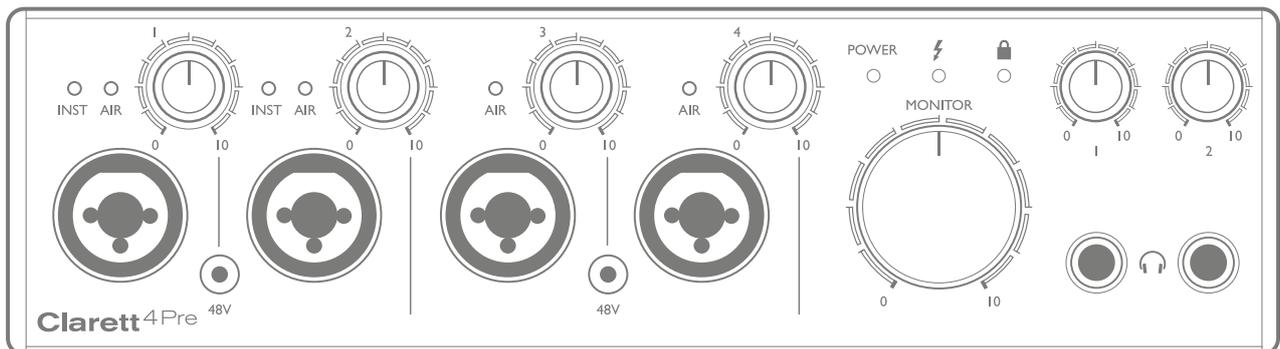

# TABLE OF CONTENTS

<b>OVERVIEW</b> .....	<b>3</b>
Introduction .....	3
Features .....	4
Box Contents .....	4
System Requirements .....	4
<b>Getting Started</b> .....	<b>5</b>
Software Installation .....	5
Hardware Features .....	6
Front Panel .....	6
Rear Panel .....	7
Connecting your Clarett 4Pre .....	8
Computer audio setup .....	8
Audio Setup in your DAW .....	8
Connecting Clarett 4Pre to loudspeakers .....	9
Examples of Usage .....	11
1. Recording a solo artist .....	11
2. Recording a drum kit with (and without) the optical connection .....	13
3. Providing foldback while recording .....	15
4. Loopback Recording .....	16
<b>FOCUSRITE CONTROL - OVERVIEW</b> .....	<b>16</b>
<b>CLARETT 4PRE TECHNICAL SPECIFICATIONS</b> .....	<b>17</b>
Performance Specifications .....	17
Physical and Electrical Characteristics .....	18
<b>TROUBLESHOOTING</b> .....	<b>19</b>
<b>COPYRIGHT AND LEGAL NOTICES</b> .....	<b>19</b>

# OVERVIEW

**WARNING:** Excessive sound pressure levels from earphones and headphones can cause hearing loss.

**WARNING:** This equipment must only be connected to Thunderbolt™ ports.

## Introduction

Thank you for purchasing this Clarett 4Pre, one of the family of Focusrite professional Thunderbolt™ audio interfaces incorporating newly-designed, high quality Clarett analogue pre-amplifiers with the unique AIR function. In conjunction with the Focusrite Control application, you now have a highly versatile and professional solution for routing high quality audio to and from your computer recording system, with extremely low latency.

You can also use the Clarett 4Pre as a “stand-alone” interface on-stage, bringing the benefits of Focusrite’s high-quality analogue mic pres to your live performance.

This User Guide provides a detailed explanation of the hardware to help you achieve a thorough understanding of the product’s operational features. We recommend you take the time to read through the Guide, whether you’re new to computer-based recording or a more experienced user, so you are fully aware of all the possibilities the Clarett 4Pre has to offer.

**IMPORTANT:** As well as this User Guide, you will need the Focusrite Control Software Guide which can be downloaded from [focusrite.com/downloads](https://focusrite.com/downloads) after registering your product.

This contains full details of **Focusrite Control**, the software application designed specifically for use with the Focusrite Clarett range of interfaces.

If either User Guide does not have the information you need, please go to [support.focusrite.com](https://support.focusrite.com), where you can find articles and tutorials beyond the scope of this user guide.

## Features

The Clarett 4Pre hardware interface provides the means for connecting microphones, musical instruments, line level audio signals and digital audio signals to a computer through the computer's Thunderbolt™ port. The signals at the physical inputs can be routed to your audio recording software / digital audio workstation (referred to throughout this user guide as the "DAW"); similarly, the outputs from the DAW can be configured to appear at the unit's physical outputs.

Audio sources – mics, instruments, etc., can be recorded into your DAW and then played back from there through amplifiers and speakers, powered monitors, headphones, a mixer or any other analogue or digital audio equipment you wish to use. Although all inputs and outputs on the Clarett 4Pre are routed directly to and from your DAW for recording and playback, you can configure the routing within your DAW, or within the Focusrite Control application, in order to meet your precise needs.

The Clarett 4Pre also has connectors for sending and receiving MIDI data; this lets you use it as a MIDI interface between your computer and other items of MIDI equipment in your system.

An important feature of the Clarett 4Pre is the new design of analogue preamplifier. In addition to their class-leading dynamic range and ability to provide all the gain you're ever likely to need, the circuitry now includes an exciting new AIR function. Individually selectable on each channel, AIR subtly modifies the pre-amp's frequency response to model the impedance and resonance characteristics of Focusrite's classic transformer-based ISA mic preamps. When recording with good quality microphones, you will notice an enhanced clarity and definition in the important mid frequency range, just where it is most needed for vocals and many acoustic instruments.

The accompanying software application, **Focusrite Control**, is designed to require a minimal amount of user interaction, letting you easily configure the Clarett 4Pre with signal routings appropriate for the most common recording tasks. For more complex situations, it provides extensive routing and monitoring options, as well as the ability to control global hardware settings such as sample rate and synchronisation.

All inputs on the Clarett 4Pre are routed directly to your DAW software for recording, but Focusrite Control also allows you to route these signals internally within the device to the outputs so you can monitor the audio signals with ultra-low latency - before they arrive at your DAW, should you need to do so.

## Box Contents

Along with your Clarett 4Pre you should have:

- DC power supply (AC adaptor)
- Important Information, with codes for accessing the following on-line resources:
  - Focusrite Red 2/Red 3 Plug-in Suite
  - Optional bundled software.

## System Requirements

**IMPORTANT** – Please visit the following link for up-to-date information on computer and operating system compatibility for all Clarett products:


[support.focusrite.com](http://support.focusrite.com)

# GETTING STARTED

**IMPORTANT:** Please ensure you install the Focusrite Control before connecting the interface to your computer.

## Software Installation


All software required by the Clarett 4Pre, including several powerful and useful extras, is available for download from the Focusrite website ([focusrite.com/downloads](https://focusrite.com/downloads)). The Important Information provided with your Clarett 4Pre contains validation codes if you wish to register your Clarett and access the optional bundled software.

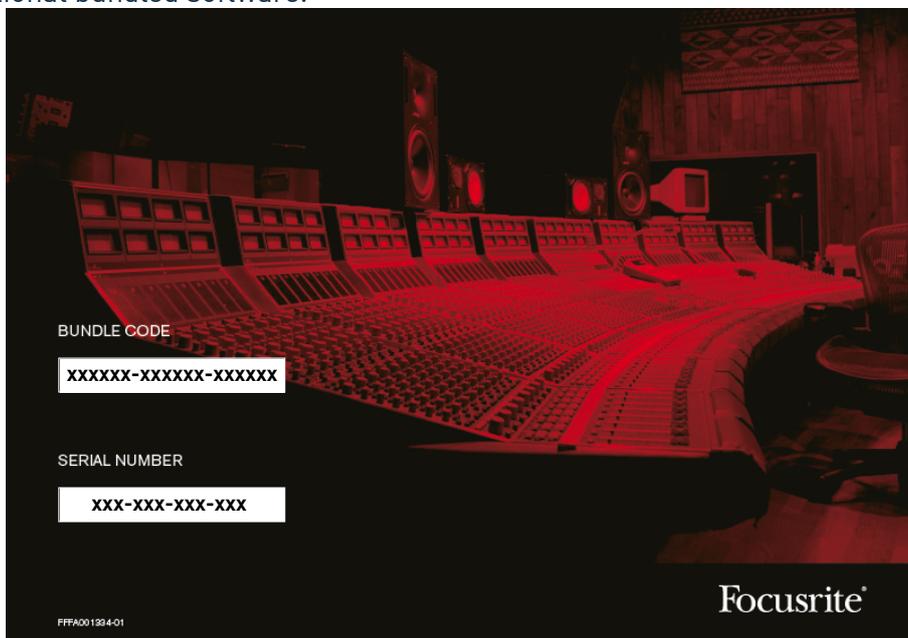

1. Using your usual browser, go to [focusrite.com/register/](https://focusrite.com/register/).
2. Follow the on-screen instructions, entering the “Bundle Code” into the form where prompted. Your Bundle Code can be found on the Important Information packed with the unit.
3. You will then be able to access the “My Products” page, where the software products to which your registration entitles you are available for download, complete with activation codes where applicable.
4. Download and install the Focusrite Control software application. Follow all on-screen instructions.
5. When the installation is complete, you will be prompted to restart your computer.
6. After restart, connect the Clarett 4Pre to your computer with a Thunderbolt cable.
7. If you are having trouble getting started please watch our video guide here - [focusrite.com/get-started/clarett-4pre](https://focusrite.com/get-started/clarett-4pre).

## Hardware Features


### Front Panel

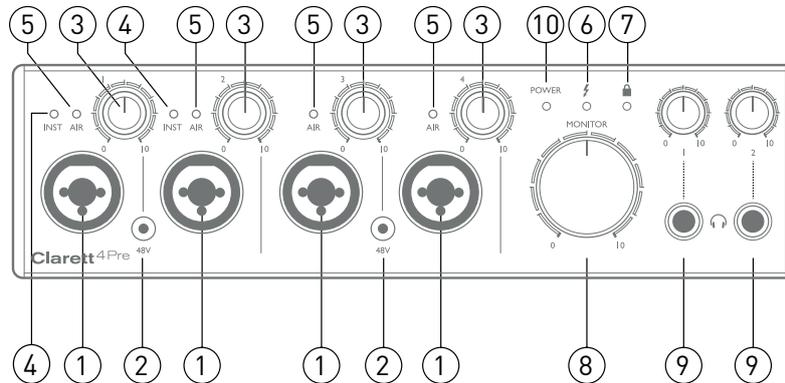

The front panel includes input gain and monitoring controls as well as four of the input connectors for Mic, Line and Instrument signals.

1. **INPUTS 1 to 4** – “ComboXLR” input sockets for each channel – connect microphones, instruments (e.g., guitar), or line level signals via XLR or ¼” jacks as appropriate. Either TRS (balanced) or TS (unbalanced) jack plugs can be used for instruments or line level signals.
2. **48V** – two switches enabling 48 V phantom power at the XLR contacts of the Combi connectors for mic inputs 1 & 2 and 3 & 4 respectively. The switches each have an associated red LED indicating phantom power is selected.
3. **Gain 1 to 4** – four rotary controls: adjust the input gain for the signals at Inputs 1 to 4 respectively.
4. **INST** – two red LEDs which illuminate when INST mode is selected for the jack contacts of Inputs 1 or 2 from Focusrite Control software. When INST is selected, the gain range and input impedance are altered (relative to LINE), and the input is made unbalanced. This optimises it for the direct connection of instruments via a 2-pole (TS) jack plug. When INST is off, the inputs are suitable for the connection of line level signals. Line level signals may be connected either in balanced form via a 3-pole (TRS) jack or unbalanced, via a 2-pole (TS) jack.
5. **AIR** – four yellow LEDs – one per input – which illuminate when the AIR function is selected for the input from Focusrite Control. AIR modifies the frequency response of the input stage to model the classic, transformer-based Focusrite ISA mic preamps.
6. **⚡ (Thunderbolt active)** – a green LED which illuminates when the unit has established a connection with the computer to which it is connected.
7. **🔒 (Locked)** – a green LED which confirms clock synchronisation, either to the Clarett 4Pre’s internal clock or to an external digital input.
8. **MONITOR** – main monitor output level control – this control will normally control the level at the main monitor outputs on the rear panel, but can be configured in Focusrite Control to adjust the level of any of the unit’s four analogue outputs.
9. **🎧 (Headphones) 1 and 2** – connect headphones here. The stereo mixes at these outputs are set up in Focusrite Control: Headphone 1 always carries the same mix as Line Outputs 3 and 4, while Headphone 2 can provide a completely independent mix by using Outputs 5 and 6 in the software. Each headphone output has its own volume control.
10. **POWER** – green LED confirming DC power is connected.

## Rear Panel

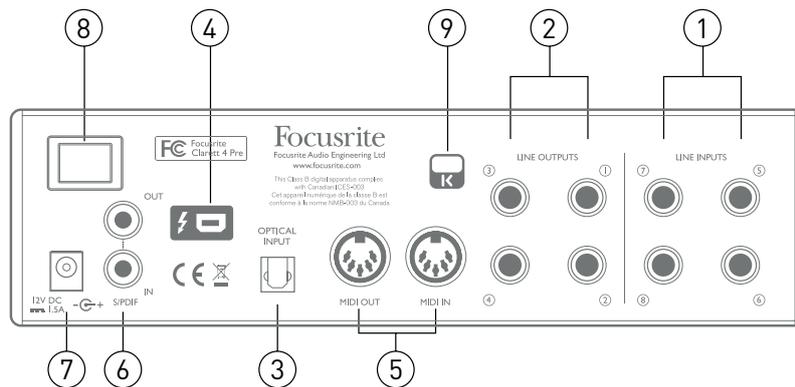

1. **LINE INPUTS 5 to 8** – four balanced analogue line inputs for Channels 5 to 8, on ¼” TRS jack sockets. Connect further line level signals here using ¼” TRS (balanced) or TS (unbalanced) jack plugs.
  2. **LINE OUTPUTS 1 to 4** – four balanced analogue line outputs on ¼” jack sockets; use TRS jacks for a balanced connection or TS jacks for unbalanced. Line Outputs 1 and 2 will generally be used for driving the main L and R speakers of your monitoring system, while Outputs 3 and 4 can be used for driving alternative speakers (i.e., midfield, nearfield, etc.), providing foldback mixes or to send audio to outboard FX processors. The signals routed to all the outputs may be defined in Focusrite Control.
  3. **OPTICAL INPUT** – a TOSLINK connector carrying eight channels of digital audio in ADAT format at 44.1/48 kHz sample rate, four channels at 88.2/96 kHz or two channels at 176.4/192 kHz. These are additional inputs to the Clarett 4Pre, and appear within Focusrite Control as Inputs 13 to 20. This input can also be configured to work with an optical S/PDIF source.
  4. **Thunderbolt™** – Thunderbolt™ connector; connect the Clarett 4Pre™ to your computer with a suitable Thunderbolt™ cable.
  5. **MIDI IN and MIDI OUT** – standard 5-pin DIN sockets for connection of external MIDI equipment, allowing MIDI data to/from your computer to be received and distributed to additional MIDI devices.
- SPDIF IN and OUT** – two phono (RCA) sockets carrying two-channel digital audio signals in or out of the Clarett 4Pre in S/PDIF format. Like all the other inputs and outputs, the routing of S/PDIF signals may be customised in Focusrite Control. The S/PDIF Input appears in Focusrite Control as Inputs 9 and 10 and the S/PDIF Output as Outputs 7 and 8. The S/PDIF inputs are functional up to 96 kHz sample rate.
6. External DC power input – power the Clarett 4Pre via the separate AC adaptor (PSU) supplied. The PSU is a 12 V DC unit rated at 2 A.
  7. Power On/Off switch.
  8. Kensington security slot– secure your Clarett 4Pre to a suitable structure if desired. Please see [kensington.com](http://kensington.com) for further information on how to use this feature.

## Connecting your Clarett 4Pre

**IMPORTANT:** Before you connect the Clarett 4Pre to your computer, please complete the software installation according to the instructions on page 5. This will ensure the hardware uses the correct drivers, and will prevent unexpected behaviour.

The Clarett 4Pre must be powered using the supplied AC adaptor (PSU). Plug the connector on the PSU into the rear panel power socket and turn the unit on with the power switch.

The Clarett 4Pre has a Thunderbolt™ port (on the rear panel). Once the software installation is complete, connect the Clarett 4Pre to your computer using a Thunderbolt™ cable.

### Computer audio setup

Your OS should automatically select the Clarett 4Pre as the default audio device. You can check this selection has been made correctly, if you wish. Details of how to do this on various operating systems can be found at [focusrite.com/get-started/clarett-4Pre](https://focusrite.com/get-started/clarett-4Pre).

### Audio Setup in your DAW



After installing the drivers and connecting the hardware, you can start using the Clarett 4Pre with the DAW of your choice.

Please note - your DAW may not automatically select the Clarett 4Pre as its default I/O device. In this case, you must manually select the driver on your DAW's **Audio Setup**\* page, and select the **Focusrite Thunderbolt** driver. Please refer to your DAW's documentation (or Help files) if you are unsure where to select the Clarett 4Pre as your audio device.

\* Typical name – page names may vary with DAW

## Connecting Clarett 4Pre to loudspeakers

The 1/4" jack **LINE OUTPUTS 1** and **2** on the rear panel will normally be used to drive monitoring speakers. Self-powered monitors (e.g., typical computer speakers) have internal amplifiers, and may be connected directly. Passive loudspeakers will require a separate stereo amplifier; in this case, the outputs should be connected to the amplifier's inputs.

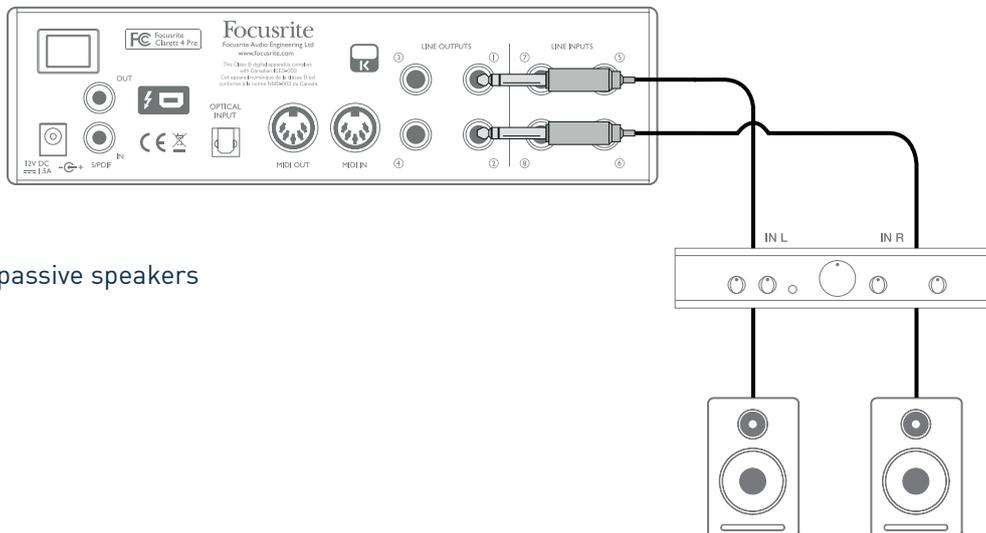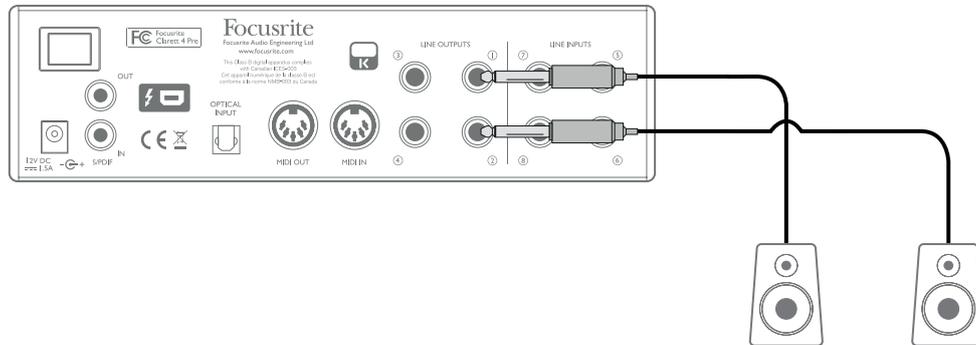


Connecting passive speakers

All the line output connectors are 3-pole (TRS) 1/4" jack sockets, and are electronically balanced. Typical consumer (hi-fi) amplifiers and small powered monitors will have unbalanced inputs, either on phono (RCA) sockets, or via a 3.5 mm 3-pole jack plug intended for direct connection to a computer. In either case, use a suitable connecting cable with jack plugs at one end.

Professional power amplifiers will generally have balanced inputs.

When mixing, you can connect an additional pair of speakers (mid-field, near-field, etc.) to **LINE OUTPUTS 3** and **4** to check your mix on different types of speaker. You can configure Focusrite Control to route the mix to these outputs as well as Outputs 1 and 2.

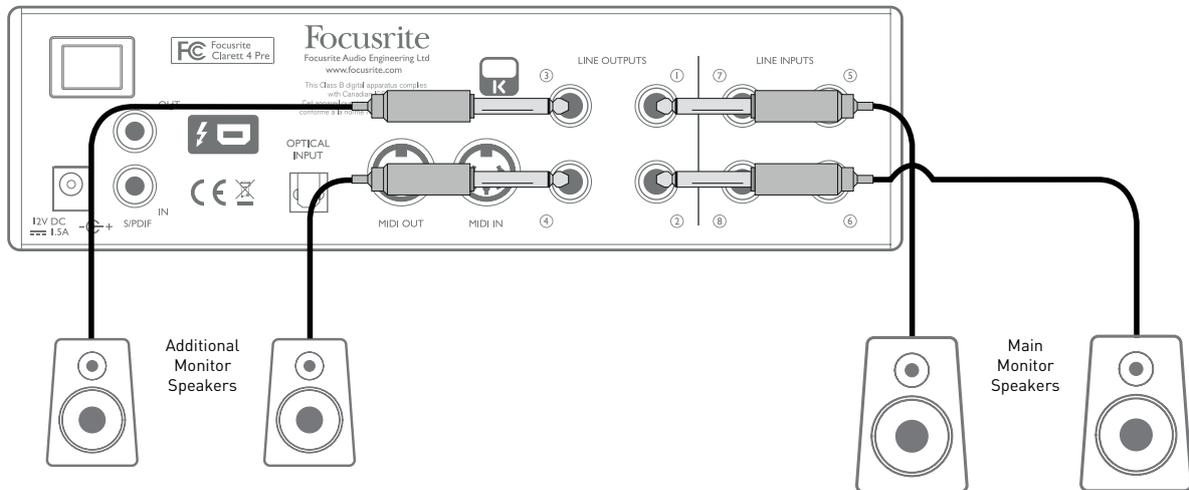

**IMPORTANT:**

**LINE OUTPUTS 1** and **2** incorporate “anti-thump” circuitry that protects your speakers if the Clarett 4Pre is turned on while the speakers (and amplifier if used) are connected and active.


**LINE OUTPUTS 3** and **4** do not have this circuitry.

If you’re using additional speakers connected to these outputs, we recommend you power your Clarett 4Pre on first, *then* turn on the speakers or power amplifier. But get into the habit of following the general rule in any case - it is *always* good audio practice to turn on a speaker system of any kind *after* turning on the equipment feeding it.

## Examples of Usage

The Clarett 4Pre is an excellent choice for numerous recording and monitoring applications. Some typical configurations are shown below.

### 1. Recording a solo artist

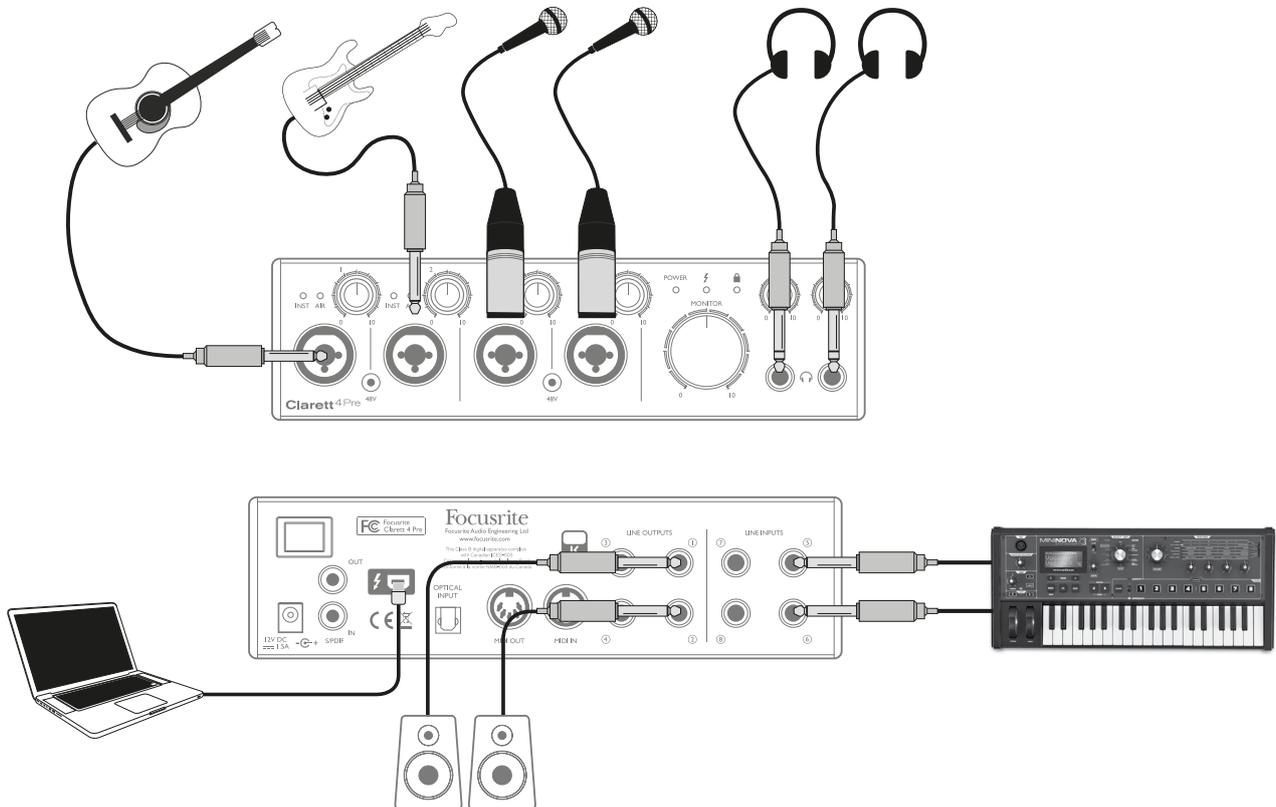

This setup shows a typical configuration for multitrack recording with DAW software on your computer.

In this example we are making a live recording of a small band consisting of electro-acoustic guitar, bass guitar, synthesiser and two vocalists. Two microphones and the two guitars are shown connected to the Clarett 4Pre's front panel inputs.

Note that only Inputs 1 and 2 can be configured to accept instruments directly, so we have used these two inputs for the two guitars.

Ensure INST mode is selected for Inputs 1 and 2 from Focusrite Control, and the **INST** LEDs are illuminated. The two mics for vocals are plugged into Inputs 3 and 4; if they are condenser mics, press the **48V** button to enable phantom power. The stereo line output from the synthesiser is connected to **LINE INPUTS 5** and **6** on the rear panel.

You can monitor the recording via Headphone Output 1, using Focusrite Control to set up your monitoring mix. A second, different mix can be created if and can be routed to Headphone Output 2.


**A note about latency**

You will probably have heard the term “latency” used in connection with digital audio systems. In the case of the DAW recording application described above, latency is the time it takes for your input signals to pass through your computer and audio software, and back to you. Latency is rapidly becoming a problem of the past; the Thunderbolt™ interface used by your Clarett 4Pre is much faster than the USB or FireWire interfaces you may have used previously. As a result, you will nearly always be able to monitor your recordings through your DAW without noticing latency.

There is a possible exception to this: when you need to set the recording buffer size to a high value – this may be necessary when you are recording overdubs on a particularly large project, with many DAW channels, including software instruments and FX plug-ins. To overcome this, Focusrite Control gives you the option of sourcing your monitor feed directly from the Clarett 4Pre’s inputs.

## 2. Recording a drum kit with (and without) the optical connection


In addition to the 8 analogue inputs, the Clarett 4Pre has an ADAT input (**OPTICAL IN**) which can provide an additional 8 inputs at 44.1/48 kHz sample rate, 4 at 88.2/96 kHz or 2 at 176.4/192 kHz. Using a separate 8-channel microphone preamp equipped with an ADAT output – such as the Focusrite OctoPre – provides a method of expanding the Clarett 4Pre's input count. This could, for example extend the recording example above to include a close-miked drum kit, as shown below.

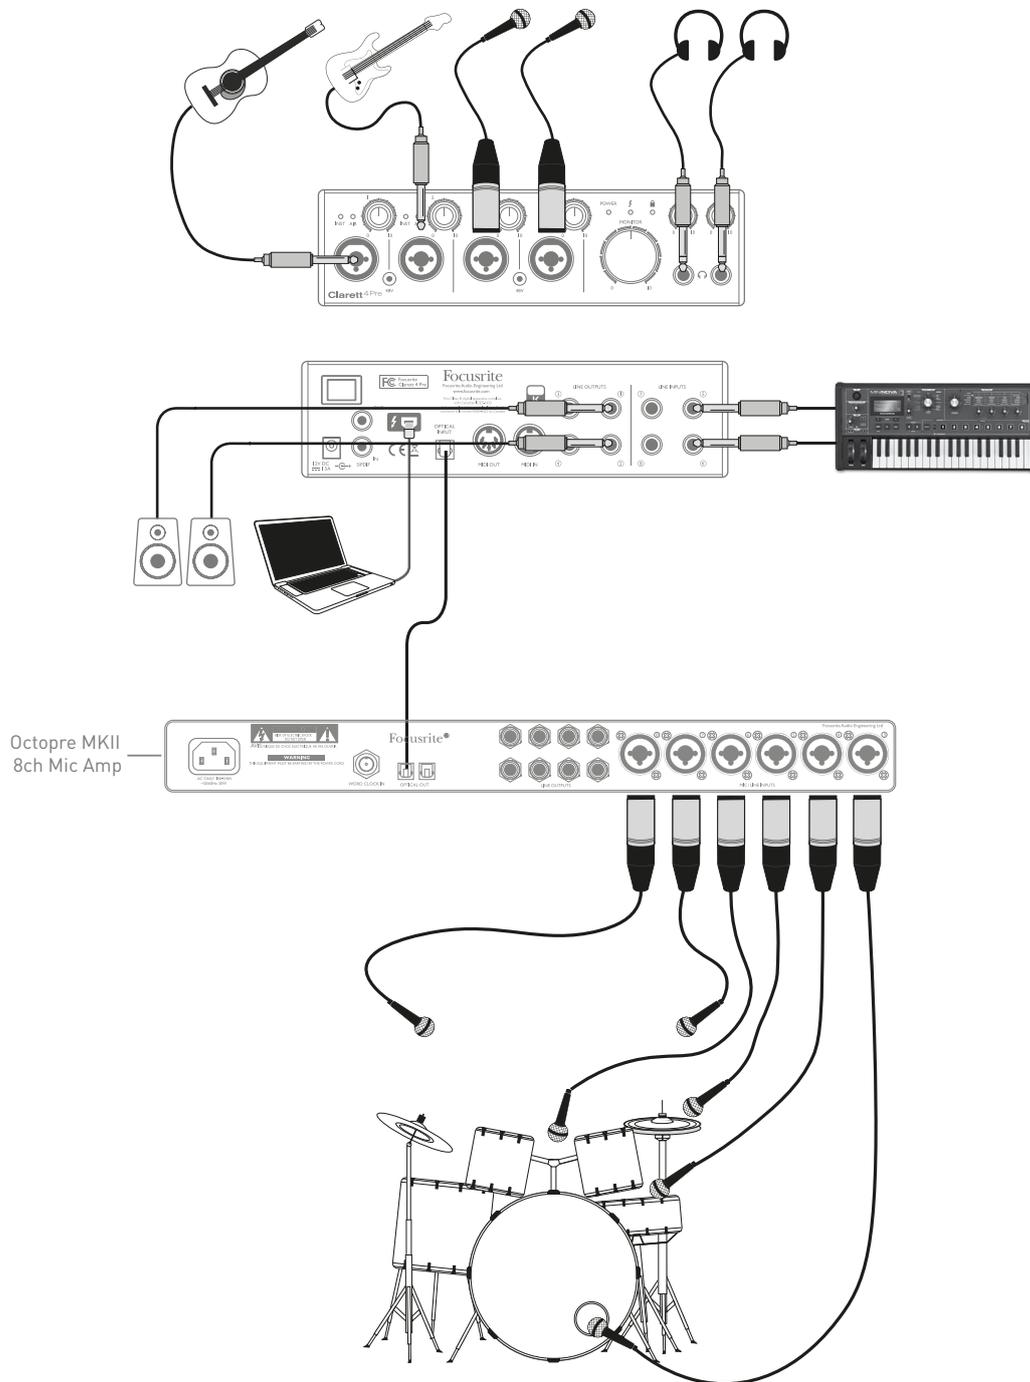

The OctoPre's **OPTICAL OUT** port is connected to the Clarett 4Pre's **OPTICAL IN** port with a single TOSLINK optical cable. To synchronise the two devices set the Clarett 4Pre's clock source (in Focusrite Control) to ADAT and set the Octopre to Internal. **NOTE:** when interconnecting two digital devices by any method, always ensure both are set to use the same sample rate.

The additional inputs from the optical port may be routed using Focusrite Control in exactly the same way as the other inputs. The additional inputs can form part of any musician's headphone mix, as required.

If an ADAT-equipped mic pre-amp is not available, you can record drums with just four mics as shown below:

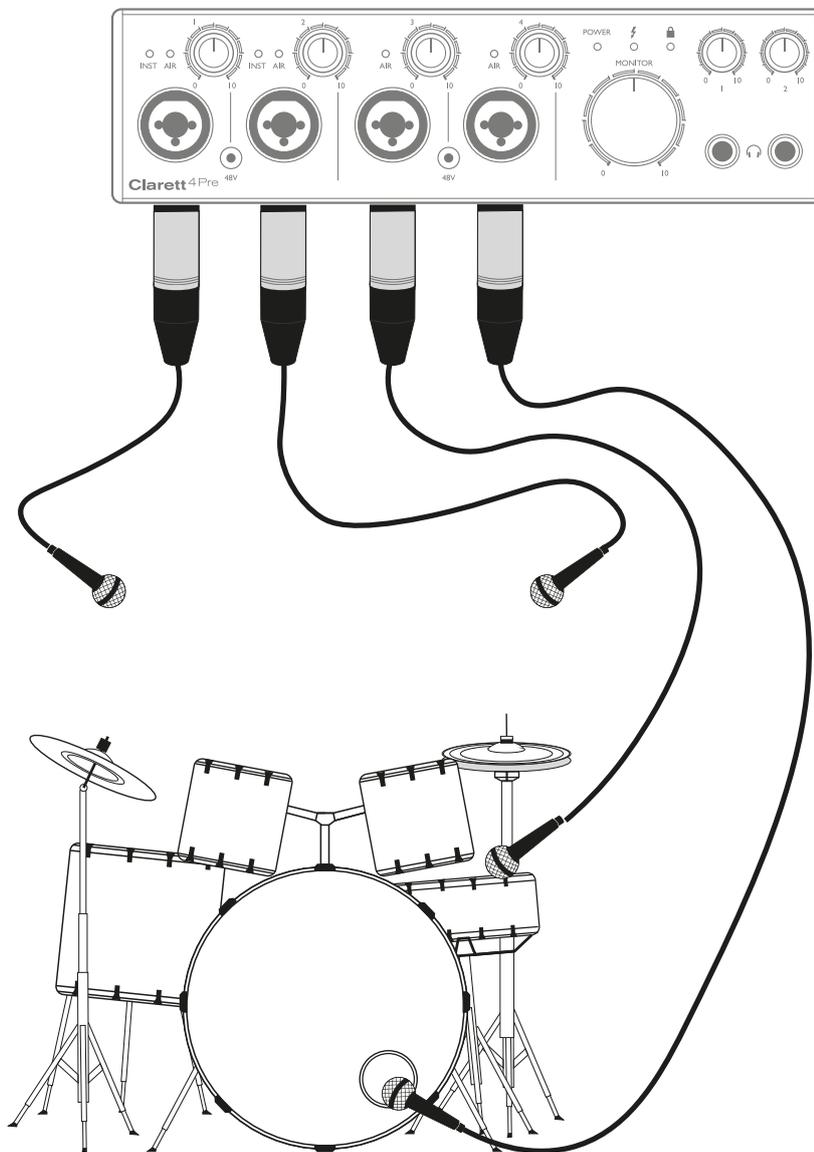


### 3. Providing foldback while recording

While recording, musicians will often prefer to hear themselves along with the other players, and when overdubbing, the tracks that have already been recorded. A mix created for this purpose, which the musician can hear on headphones while performing, is called foldback.

Focusrite Control lets you define several different mixes, each of which may be either mono or stereo, and which may be routed to any of the Clarett 4Pre's outputs. This enables individual musicians to have a foldback mix optimised to their own needs. In this way, each foldback feed can be made up from a different mix of a musician's own input, the live contributions from the other performers, and DAW tracks which have already been recorded. See the Focusrite Control Guide for details of how to configure different mixes, and how to route them to the Clarett's 4Pre's various outputs.

Each of the two headphone outputs on the front panel initially provide a default mix: Headphone 1's mix is always the same stereo mix routed to Line Outputs 3 and 4, while Headphone 2 has a completely independent mix dedicated for headphone monitoring use. You can adjust the content of both mixes in Focusrite Control - that for Outputs 3/4 defines what is heard by Headphones 1, and that for Outputs 5/6 (which have no corresponding rear panel sockets) defines what is heard by Headphones 2 .

Either or both of these may be used for foldback mixes; each output can drive a pair of headphones directly. This is the easiest method, and has the advantage the mixes are stereo. If you need to drive additional pairs of headphones, you'll need to include an external headphone amplifier as part of your set-up:

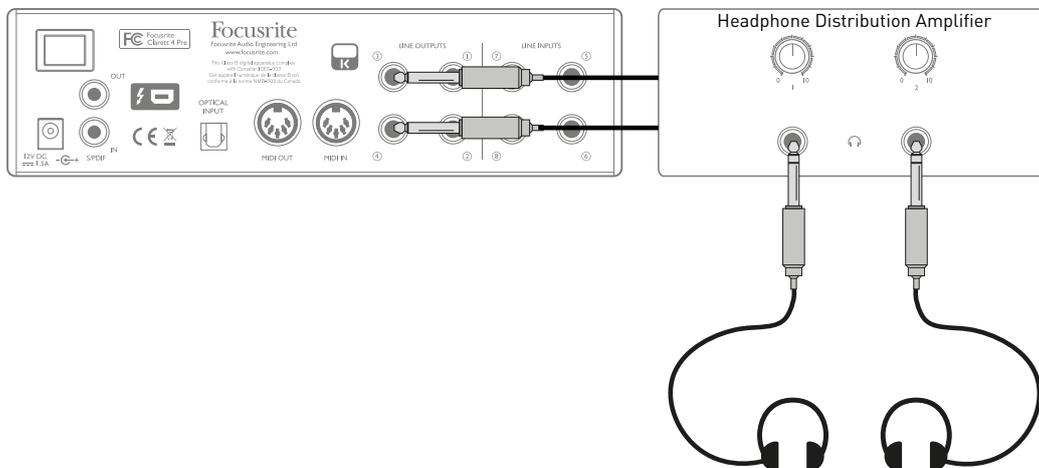

Always remember - when you source a monitor mix from input signals, ensure the DAW channels on which you are recording are muted, otherwise the musicians will hear themselves "twice", with one signal audibly delayed as an echo.

## 4. Loopback Recording

Focusrite Control's Loopback feature lets you record other audio sources from within your computer (e.g., the audio output from a web browser). Loopback uses the Clarett's "virtual" inputs, which have no physical connectors on the hardware interface itself, but may be selected in the DAW as signal sources for recording.

By routing DAW 1 and 2 to your Loopback mix in Focusrite Control, when you select the Loopback output as the recording source on a mono or stereo DAW track, you can record from another software application into your DAW. Note your computer will assign DAW 1 and DAW 2 as the default sound output channels.

For instructions on how to use the Loopback recording function, please see the Focusrite Control Clarett User Guide available from:

[focusrite.com/downloads](https://focusrite.com/downloads)

## FOCUSRITE CONTROL - OVERVIEW

**Focusrite Control** is the software application used with the Clarett 4Pre. It allows you to create a custom monitor mix for each musician, and also to specify the routing of all audio signals to the physical audio outputs. All sample rate selection, digital syncing and buffer size settings (Windows only) are available from Focusrite Control.

Note: Focusrite Control is also used with other hardware interfaces in the Focusrite range. When you connect an interface to your computer and launch Focusrite Control, the model of interface is automatically detected, and the software configured to suit the number of inputs and outputs, and other features, available on the hardware.

Focusrite Control has its own, dedicated User Guide, which contains detailed operating instructions for all aspects of the software. This may be downloaded from:  
[focusrite/downloads](https://focusrite.com/downloads).

# CLARETT 4PRE TECHNICAL SPECIFICATIONS

## Performance Specifications

<b>Configuration</b>	
Inputs	18: analogue (8), S/PDIF (2), ADAT (8)
Outputs	8: analogue (4), S/PDIF (2), HP (2)
Mixer	Fully assignable 26-in/10-out mixer
<b>Digital Performance</b>	
Supported sample rates	44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz & 192 kHz
<b>Microphone Inputs</b>	
Frequency Response	20 Hz - 20 kHz +/-0.1 dB
Dynamic Range	118 dB (A-weighted)
THD+N	0.001%
Noise EIN	-128 dBu (A-weighted)
Maximum input level	+18 dBu
Gain Range	57 dB
Impedance	AIR Off: 6.2k $\Omega$ - AIR On: 2.2k $\Omega$
<b>Line Inputs</b>	
Frequency Response	20 Hz - 20 kHz +/-0.1 dB
Dynamic Range	116 dB (A-weighted)
THD+N	0.005%
Maximum input level Inputs 1-4 (Fixed Line Inputs 5-8)	+26 dBu (+10dBu)
Gain Range	+57 dB
Impedance	>50k $\Omega$
<b>Instrument Inputs</b>	
Frequency Response	20 Hz - 20 kHz +/-0.1 dB
Dynamic Range	111 dB (A-weighted)
THD+N	0.001%
Maximum input level	+14 dBu
Gain Range	+57 dB
Impedance	>2M $\Omega$
<b>Line Outputs</b>	
Dynamic Range	117 dB
THD+N	0.0007%
Maximum Output Level (0 dBFS)	+18 dBu, balanced
<b>Headphone Outputs</b>	
Dynamic Range	112 dB
THD+N	0.0008%
Maximum Output Level	+16 dBu

## Physical and Electrical Characteristics

<b>Analogue Inputs 1 to 4</b>	
Connectors	“Combo XLR” sockets: Mic/Line/Inst (Inputs 1 & 2); Mic/Line (Inputs 3 & 4) on front panel
Mic/Line switching	Automatic
Line/Instrument switching (Inputs 1 & 2)	via Focusrite Control
Phantom power	+48 V switches for inputs 1 & 2, 3 & 4
<b>Analogue Inputs 5 to 8</b>	
Connectors	4 x balanced ¼” TRS jacks on rear panel
<b>Analogue Outputs</b>	
Main outputs	4 x balanced ¼” TRS jacks on rear panel
Stereo headphone outputs	2 x ¼” TRS jack on front panel
Main monitor output level control	On front panel
Headphones level controls	
<b>Other I/O</b>	
ADAT Input	TOSLINK optical connector: 8 channels at 44.1/48 kHz 4 channels at 88.2/96 kHz 2 channels at 176.2/192 kHz Optical S/PDIF input (selectable up to 96kHz)
S/PDIF I/O	2 x phono (RCA)
Data connector (to Mac)	1 x Thunderbolt connector
MIDI I/O	2 x 5-pin DIN sockets
<b>Weight and Dimensions</b>	
W x D x H	222 mm x 192 mm x 63.5 mm / 8.74” x 7.56” x 2.5”
Weight	1.35 kg 2.98 lbs

## **TROUBLESHOOTING**

For all troubleshooting queries, please visit the Focusrite Help Centre at [support.focusrite.com](https://support.focusrite.com).

## **COPYRIGHT AND LEGAL NOTICES**

Focusrite is a registered trade mark and Clarett 4Pre is a trade mark of Focusrite Audio Engineering Limited.

All other trade marks and trade names are the property of their respective owners.  
2016 © Focusrite Audio Engineering Limited. All rights reserved.